



# Simple Create

## UJV300DTF-75 Print Guide

MIMAKI ENGINEERING CO., LTD.

D203924-10

# Contents

Introduction.....	<a href="#"><u>3</u></a>
Software Configuration and Installation Procedure ....	<a href="#"><u>4</u></a>
Types of Installers .....	<a href="#"><u>5</u></a>
1. Installation of Installer Package .....	<a href="#"><u>6</u></a>
2. Installation of Simple Create .....	<a href="#"><u>7</u></a>
Preparation.....	<a href="#"><u>8</u></a>
1. Connecting Printer and Starting RasterLink7 .....	<a href="#"><u>8</u></a>
2. Registering Printer .....	<a href="#"><u>9</u></a>
3. Starting Simple Create .....	<a href="#"><u>10</u></a>
Output Procedure.....	<a href="#"><u>11</u></a>
1. Setting Up Network .....	<a href="#"><u>12</u></a>
2. Creating Design .....	<a href="#"><u>13</u></a>
3. Setting Up Printer .....	<a href="#"><u>14</u></a>
4. Printing .....	<a href="#"><u>15</u></a>
Troubleshooting .....	<a href="#"><u>16</u></a>
1. When Maximum Number of Registered Jobs is Reached in RaterLink7.....	<a href="#"><u>16</u></a>

# Introduction

This manual describes how to output from Simple Create to UJV300DTF-75, using the print setting templates (hereinafter referred to as the "template").

## **Note**

- Any unauthorized use or reproduction, in part or whole, of this manual is strictly prohibited.
- The information in this manual may be subject to change without notice in the future.
- Note that some of the descriptions in this manual may differ from the actual specifications due to improvements and revisions to this software.
- Copying Mimaki Engineering Co. Ltd. software described in this manual to other disks (except for the purpose of backup) or loading it to memory other than for the purpose of running it, is strictly prohibited.
- With the exception of what is provided in the warranty provisions, Mimaki Engineering Co. Ltd. does not assume any liability for any damage (including, but not limited to, the loss of profit, indirect damage, special damage, or other monetary damages) resulting from the use or inability to use this product. The same shall also apply to cases where Mimaki Engineering Co. Ltd. has been advised of the possibility of damage in advance. For example, we shall not be liable for any loss of media (work) caused by use of this product or indirect losses caused by products created using the media.

RasterLink, Simple Create, and RasterLink Interface are the trademarks or registered trademarks of Mimaki Engineering Co., Ltd. in Japan and in other countries.

Microsoft, Windows, Windows 10, and Windows 11 are the registered trademarks or trademarks of Microsoft Corporation in the United States and in other countries.

macOS is the trademark or registered trademark of Apple Inc. in the United States and in other countries.

iOS is the name of the OS of Apple Inc. IOS is the registered trademark or trademark of Cisco Systems, Inc. or its affiliates in the United States and in other countries, and is used under license.

Android is the trademark or registered trademark of Google LLC.

Other company names and product names described in this manual are the trademarks or registered trademarks of each company.

# Software Configuration and Installation Procedure

No.	Software	Description	Version	Installation environment
1	RasterLink7	A software that edits the jobs created by reading various image data in a variety of ways and operates the printer.	Ver.3.3.3 or later	Windows PC
2	Mimaki Driver	A software that is required for the printer to print.	Ver.5.9.15 or later	Windows PC
3	RasterLink Interface	A tool that allows to create a job or print from Simple Create directly, without operating RasterLink7 directly.	Ver.1.0 or later	Windows PC
4	PICTUp	Cloud-based printer status monitoring tool that supports the improvement of printing efficiency and operation management.	Ver.1.50 or later	Windows PC
5	Other software	Device profile: A profile for UJV300DTF-75. Template: A print setting template to easily print UJV300DTF-75 from Simple Create.	—	Windows PC
6	Simple Create	Simple Create is a software that allows easy operation from design creation to layout, and then to print/cut.	Ver.1.1 or later	Windows/Mac PC, iOS/Android smartphone/tablet

1 <Environmental preparation> Prepare a Windows PC for installing RasterLink7 and related software, and a Windows/Mac PC or an iOS/Android smartphone/tablet for installing Simple Create.



2 <UJV300DTF-75 installer package> [Download and install the installer package](#) from our official website.



3 <Simple Create> [Install Simple Create from the store.](#)

For a detailed installation method, refer to the following pages.

# Types of Installers

No.	Installer	Description
1	UJV300DTF-75 Installer Package ELS-170	Install the following software. <ul style="list-style-type: none"><li>• RasterLink7</li><li>• Mimaki Driver</li><li>• RasterLink Interface</li><li>• PICTUp</li><li>• UJV300DTF-75 ELS-170 device profile</li><li>• UJV300DTF-75 ELS-170 template</li></ul>
2	Simple Create	Install Simple Create.

# 1. Installation of Installer Package (Windows PC)

Procedure



Download the installer for the installer package from the UJV300DTF-75 [Product] site > [Download] > [Driver / Utility].  
<https://mimaki.com/product/inkjet/utf/ujv300dtf-75/download-driver.html>

Workflow

- 1 <Our official website> Download the installer package.
- 2 <Installer> Double-click the downloaded self-extracting installer.
- 3 <Installer>  
**For new installations:** Follow the prompts and click “Install all the software” when the setup type selection screen appears.  
**For updates:** Follow the prompts to proceed with the installation, and on the Custom Setup screen, check the checkbox for all software and click “Install”.

If one or more of the software in the installer package (including previous versions) is installed, a screen for updating will appear.

## 2. Installation of Simple Create

### Procedure



Install Simple Create from each store.

For details, refer to the following websites.

<https://mimaki.com/product/software/cutting/simple-create/>

[Windows]

[ms-windows-store://pdp/?productid=9N2F2PSR5F0M](https://ms-windows-store://pdp/?productid=9N2F2PSR5F0M)

\* A Microsoft account is required

[iOS/macOS]


[https://apps.apple.com/us/app/Simple Create/id6450528434](https://apps.apple.com/us/app/Simple%20Create/id6450528434)

\*An Apple ID is required

[Android]

<https://play.google.com/store/apps/details?id=com.mimaki.SimpleCreate>

\* A Google account is required

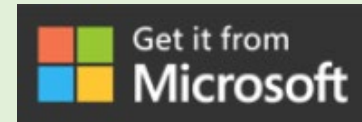

### Workflow

1 <App Store> Find Simple Create and press [GET].



2 <Simple Create> Download the app and install.

# Preparation (Windows PC)

## 1. Connecting Printer and Starting RasterLink7

Procedure



Workflow


1 <RasterLink7 and UJV300DTF-75> Connect a Windows PC and UJV300DTF-75 with an Ethernet(Cat6) or USB cable (5 m or less), and turn on UJV300DTF-75.



2 <RasterLink7> Double-click the RasterLink7 icon on the desktop.



3 <RasterLink7> RasterLink7 starts and the [Printer Management] screen is displayed.

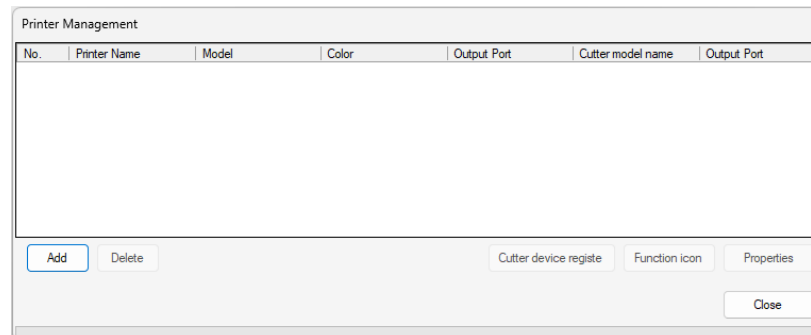



# Preparation (Windows PC)

## 2. Registering Printer


Procedure



Workflow

1


<RasterLink7> On the [Printer Management] screen, click [Add].  
\* If the [Printer Management] screen is not displayed, select [Printer Management...] on the [Environments] menu.

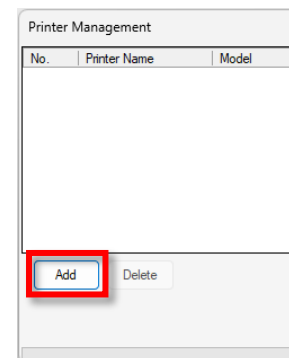

2

<RasterLink7> On the [Printer Settings] screen, set as follows and click [OK].

Model:	UJV300DTF
Color:	8Color
Output Port:	Ethernet
Inkset (no setting required):	Inkset in use is displayed automatically
Special Colorset (no setting required):	Special colorset in use is displayed automatically
Available Printers:	Select from the displayed printers
Printer Name:	Optional printer name (e.g. UJV300DTF-75-01)

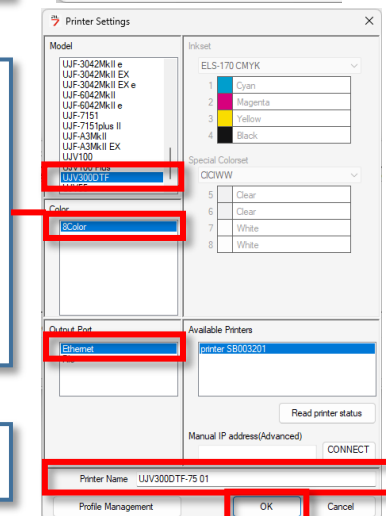


3

<RasterLink7> On the [Confirmation] dialog, click [Yes] for all.

4
 
<RasterLink7> The UJV300DTF-75 printer is registered.



# Preparation

## 3. Starting Simple Create

Procedure




Workflow

1

<Simple Create> Start Simple Create.  
Windows: Click the app icon in the Start menu  
Mac: Click the app icon in the launcher  
iOS/Android: Tap the app icon



# Output Procedure

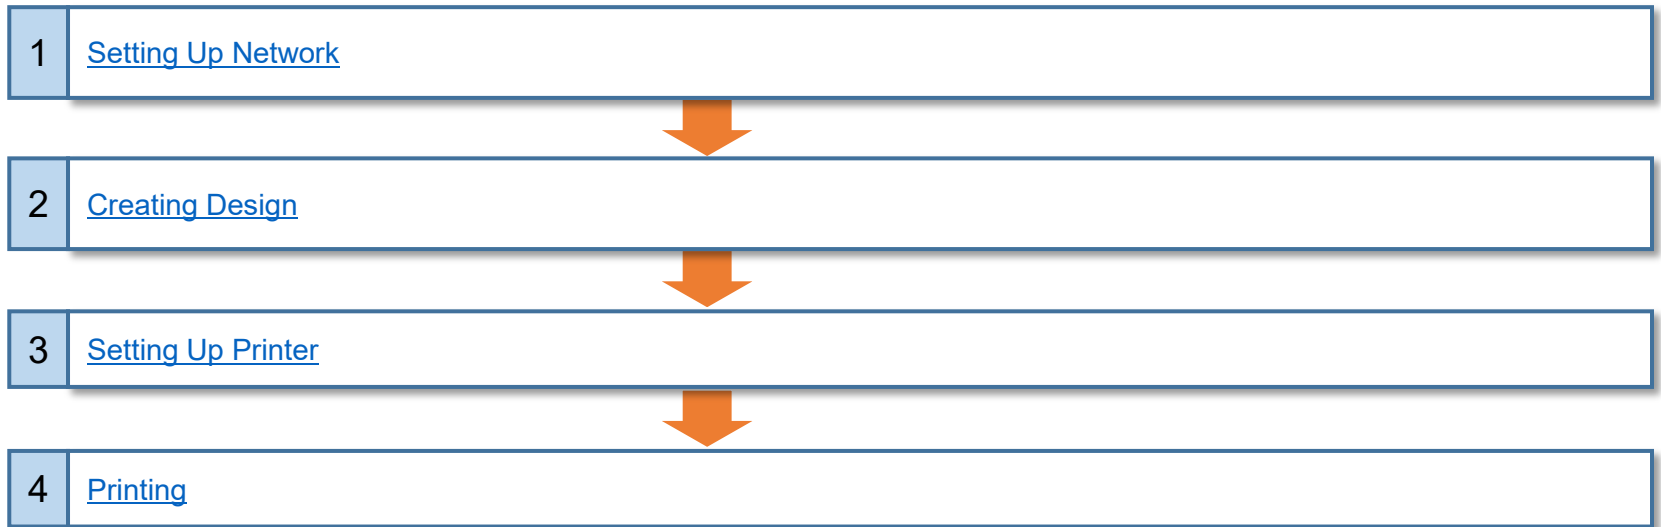

For a detailed output procedure, refer to the following pages.

# Output

## 1. Setting Up Network

Procedure



Workflow

1 Connect the PC with RasterLink7 installed and the Windows/Mac PC or smartphone/tablet with Simple Create installed to the same network.

In each OS, the settings can be confirmed and checked as follows.


Windows: [Settings] > [Network & internet]

MacPC: [System Settings] > [Wi-Fi]


iOS: [Settings] > [Wi-Fi]

Android: [Settings] > [Network & internet]


### Windows

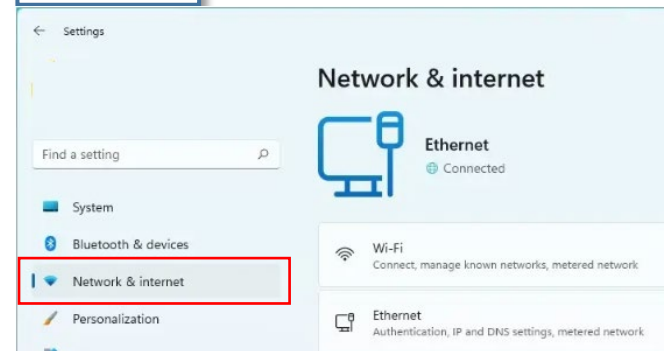


### macOS

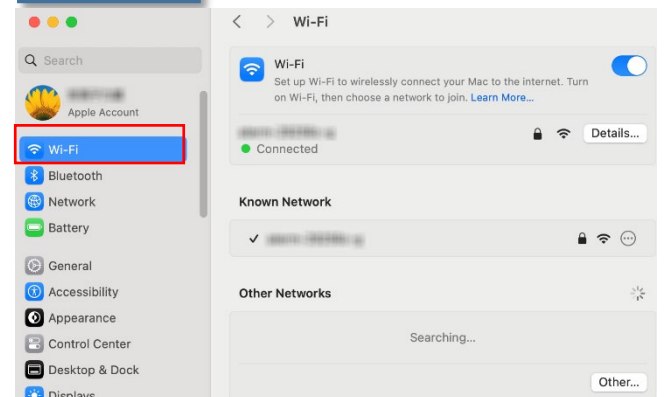

### iOS

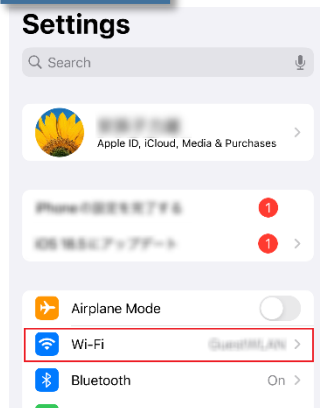

### Android

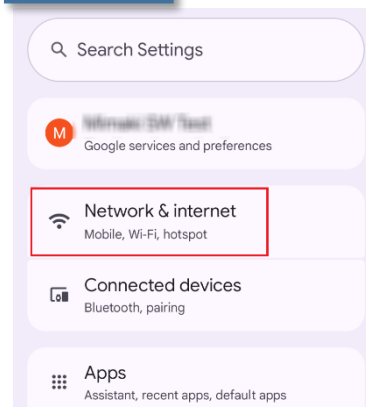

# Output

## 2. Creating Design

Procedure



Workflow

1


<Simple Create> Create a design.

For detailed operation methods, click the following menu on Simple Create and refer to the online help.


Windows/macOS: [Help] menu > [Manual]

Android/iOS: [Settings] menu > [Manual]

### Windows/macOS

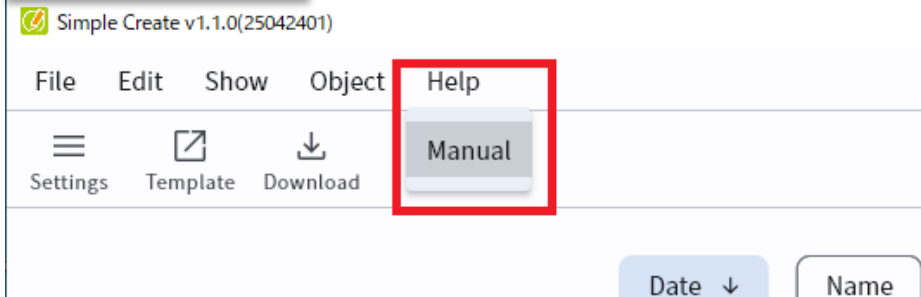

### Android/iOS

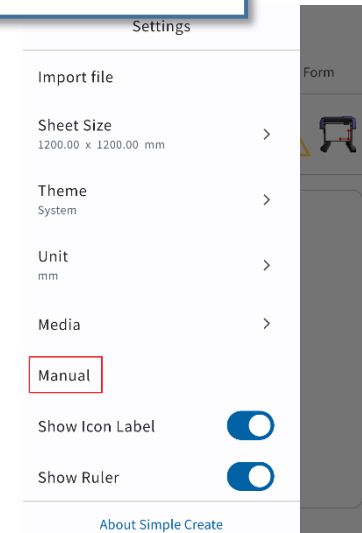

# Output


## 3. Setting Up Printer

 
Procedure




Workflow

- 1 <Simple Create> Click [Print Setting].


- 2 <Simple Create> Click the RasterLink7 icon.


- 3 <Simple Create> From [Printer Type], select "UJV300DTF".
- 4 <Simple Create> From [Printer], select the registered printer for RasterLink7 to be output.
- 5 <Simple Create> Operate as follows and go back to the original screen.  
Windows/Mac: Press the [ESC] key  
iOS/Android: Tap outside the dialog
- 6 <Simple Create> From [RL7 FavoriteHotFolder], select a hot folder for RasterLink7 from the list. If nothing is displayed, create a hot folder in RasterLink7.  
(For how to create hot folders, refer to the RasterLink7 reference guide.)



# Output

## 4. Printing

Procedure



Workflow

1 <Simple Create> Click [Next].

2 <Simple Create> Select [Media].

3 <Simple Create> Select [Print Mode].

4 <Simple Create> Select [Under Base].

5 <Simple Create> Select [Finish].

6 <Simple Create> Click [Print].

7 RasterLink7 reads and outputs the data to UJV300DTF-75.

# Troubleshooting

## 1. When Maximum Number of Registered Jobs is Reached in RasterLink7

Delete job(s) in RasterLink7.

1 <RasterLink7> Select the job to be deleted. To delete all data, press the [Ctrl]+[A] key in the job list.



2 <RasterLink7> Right-click the job and open the pop-up menu.



3 <RasterLink7> In the pop-up menu, click [Delete All Data].



4 <RasterLink7> On the [Confirmation] screen, click [OK].



5 <RasterLink7> The job is deleted and the job output from Simple Create is read.

The upper limit of the job can be increased in RasterLink7. In RasterLink7, click the [Environments] > [Option...] menu, and in the [Job Control] tab, increase the value for [Number of jobs that can be registered]. It can be set between 200 to 1000.





D203924-10-30062025

© 2025 MIMAKI ENGINEERING CO., LTD.

MM