

Raster Link 7

(Ver.3.3.3 or later)

Job Creator guide

MIMAKI ENGINEERING CO., LTD.

D203868-12

Table of Contents

Introduction 3)
Job Creator <u>4</u>	
1. Overview <u>4</u>	
2. Installing the Job Creator ———— <u>5</u>)
3-1. Importing a Template ————————————————————————————————————	
3-2. Creating a Template <u>10</u>)
4. Creating a Job <u>15</u>	,
Supplementary Information 1 20)
Supplementary Information 2 21	
Supplementary Information 322	1
Supplementary Information 4 23)

Introduction

Note

- Any unauthorized use or reproduction, in part or whole, of this manual is strictly prohibited.
- The information in this manual may be subject to change without notice in the future.
- Note that some of the descriptions in this manual may differ from the actual specifications due to improvements and revisions to this software.
- Copying Mimaki Engineering Co. Ltd. software described in this manual to other disks (except for the purpose of backup) or loading it to memory other than for the purpose of running it, is strictly prohibited.
- With the exception of what is provided in the warranty provisions, Mimaki Engineering Co. Ltd.
 does not assume any liability for any damage (including, but not limited to, the loss of profit,
 indirect damage, special damage, or other monetary damages) resulting from the use or
 inability to use this product. The same shall also apply to cases where Mimaki Engineering Co.
 Ltd. has been advised of the possibility of damage in advance. For example, we shall not be
 liable for any loss of media (work) caused by use of this product or indirect losses caused by
 products created using the media.

RasterLink is a trademark or a registered trademark of Mimaki Engineering Co. Ltd. in Japan and other countries. Microsoft, Windows, Windows 10, and Windows 11 are registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.

Other company names and product names described in this manual are trademarks or registered trademarks of their respective companies.

1. Overview

Job Creator can be directly launched from the RasterLink7 menu.

This tool allows you to create a RasterLink7 job by simply selecting a template and image.

For composite jobs that use special colors, this reduces the need to perform difficult operations on the RasterLink7 screen.

Templates can be obtained from the downloads section of our official website.

You can also create your own original templates from RasterLink7 backup job files.

2. Installing the Job Creator

When RasterLink7 is installed, Job Creator is also installed with it.

https://mimaki.com/product/software/rip/raster-link7/download.html

3-1. Importing a Template

Workflow

1 Our official website - Download and extract the template.



2 Job Creator - Launch the Job Creator and navigate to the template selection screen.




3 Job Creator - Click [Import] and select the downloaded file.

3-1. Importing a Template

Procedure



Download the template for your printer from the RasterLink7 product page.

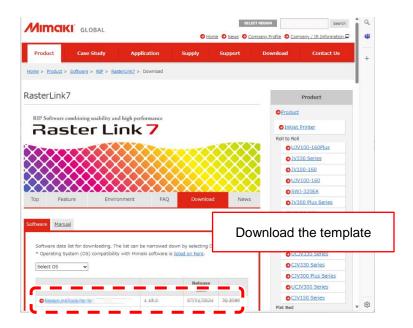

Download the template from the following URL.

https://mimaki.com/product/software/rip/raster-link7/download-utility.html

Alternatively, download it from your printer's [Product] site > [Download] > [Driver / Utility].


If there is no template for your printer on the above site, create a template from a backup job.

3-1. Importing a Template

Procedure



Launch the Job Creator and navigate to the template selection screen.

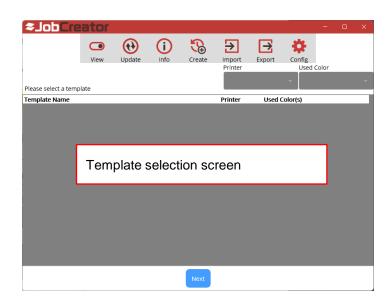

The Job Creator can be launched using one of the following methods:


- Select [Open(JobCreator)...] from the RasterLink7 [File] menu.
- Select the desired job in the RasterLink7 job list, right-click it, and then click [Recreate(JobCreator)...] from the context menu.

3-1. Importing a Template

Procedure



Click [Import] and select the downloaded template.

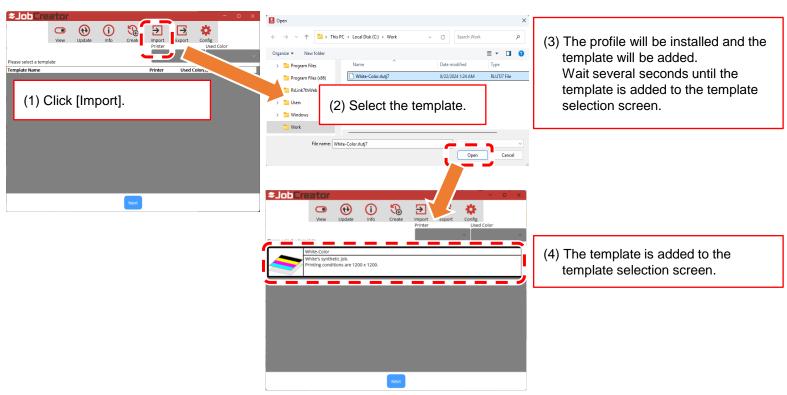

3-2. Creating a Template

The following procedure can be used to create your own original template.

Before starting the procedure, create a job for the template in RasterLink7.

Workflow

- 1 RasterLink7 Create a backup job file.
- 2 Job Creator Launch the Job Creator and navigate to the template selection screen.
- 3 Job Creator Click [Create] and select the RasterLink7 backup file.
- Job Creator Enter the template name and a memo, and then click [Save].

3-2. Creating a Template

This example shows a white-to-color composite job.


Procedure



Select a job for the template in the RasterLink7 job list and create the backup job file.

*Be sure to create a backup job using RasterLink7 v3.3.3 or later.

Operation is not guaranteed if created with backup jobs prior to RasterLink7 v3.3.3.

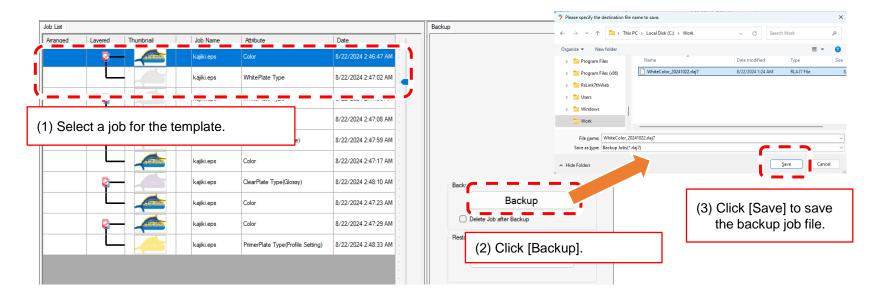


3-2. Creating a Template

This example shows a white-to-color composite job.

Procedure



Launch the Job Creator and navigate to the template selection screen.

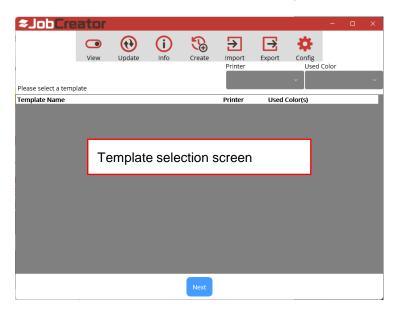


3-2. Creating a Template

This example shows a white-to-color composite job.

Procedure



Click [Create] and then select the backup job file created in RasterLink7 v3.3.3 or later version.

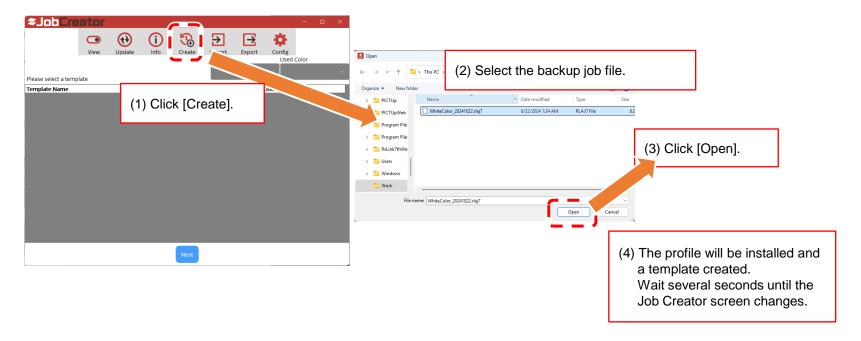


3-2. Creating a Template

This example shows a white-to-color composite job.

Procedure




Enter the template name and a memo, and then click [Save].

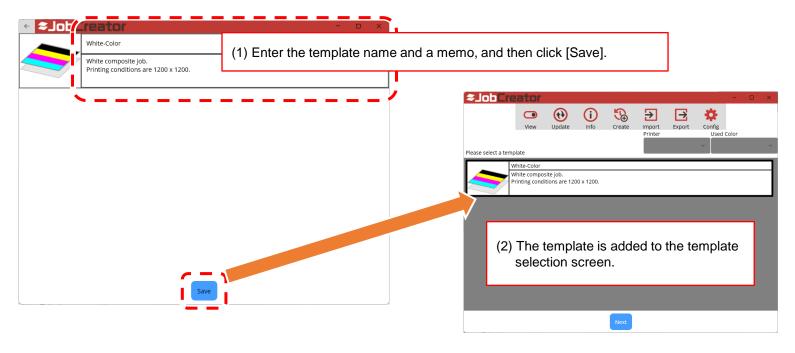

4. Creating a Job

Create a job by selecting a template and an image file.

Workflow

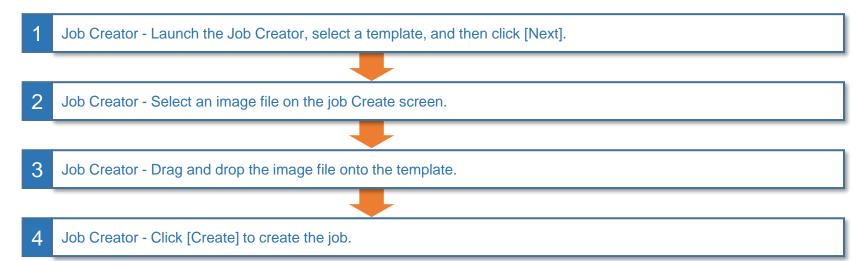


4. Creating a Job

This example shows a white-to-color composite job.



Launch the Job Creator, select a template, and then click [Next].

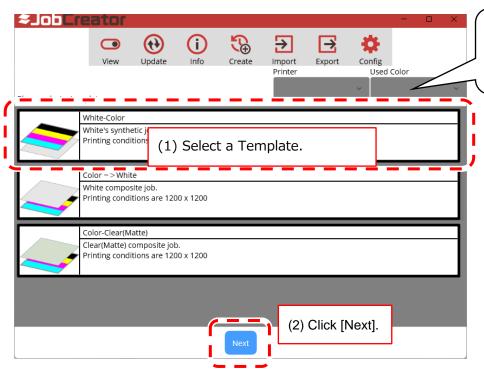

You can filter the templates to be displayed on the selection screen.


- Printer
- Special color

4. Creating a Job

This example shows a white-to-color composite job.



Click [Add Image], select the image file, and then click [Open].

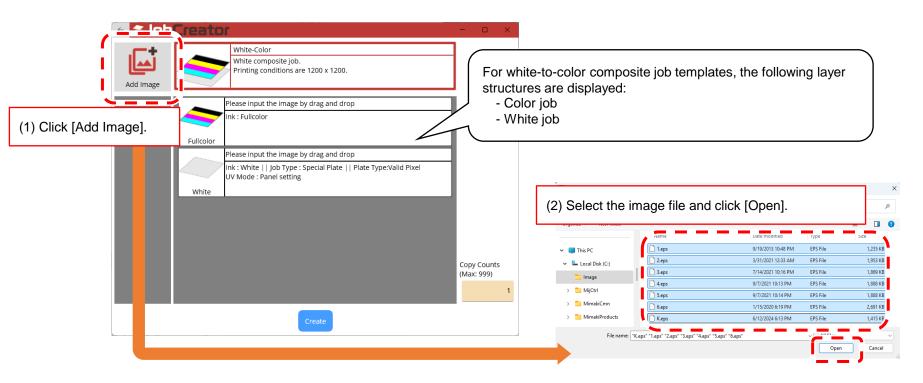

4. Creating a Job

This example shows a white-to-color composite job.



Drag and drop the image file onto the template.



- In the case of a template for creating a special plate:
 If you drag and drop an image onto a color job, the same color image will be set to the white job.

 You can also drag and drop another image onto the white job.
- In the case of a template for monoreplace:
 It is necessary to drag and drop the image file onto both the color job and the white job.

4. Creating a Job

This example shows a white-to-color composite job.





The RasterLink7 settings that can be configured using a Job Creator template are as follows.

Properties	No.	Major item	Minor item	Favorite	Template
Channel of a PNG file	1	Properties	Job attribute (Monoreplace)	Yes	Yes
Colors, matte, emboss Colors				No	Yes
General Rotation Yes Yes Yes Yes Yes Mirror Yes Yes				Yes	Yes
Print Rotation Yes Yes	2	Quality	All items *2	Yes	Yes
Mirror Yes Yes Yes	3				
Deskew		Print			
Cut line					
Arrange in the center					
Print area *2					
Register mark settings					
FOTOBA settings					
XY slitter settings					
Label Yes Yes					
Trimming			-		
Tiling		. .	Label		
Tiling ON/OFF			01-		
Rotation Yes Yes Mirror Yes Yes Overlap Yes Yes Overlap line Yes Yes Tile number Yes Yes Cut line Yes Yes Label Yes Yes Label Yes Yes Step Step & repeat ON/OFF No Yes & Scale Yes Yes repeat Rotation Yes Yes Mirror Yes Yes Arrange in the center Yes Yes Type Yes Yes Offset Yes Yes Reference line Yes Yes Yes Yes Yes Yes Yes Yes Reference line Yes Yes Yes Yes Yes Yes Yes Yes Yes Yes Yes Yes Yes Yes Yes Yes Yes Yes Yes Yes Yes Yes Yes	5	Tiling			
Mirror Yes Yes Overlap Overlap Yes Yes Overlap Yes Yes Yes Overlap line Yes Reference line Yes Yes					
Overlap			7.10.10.11.		
Overlap line					
Tile number					
Cut line					
Label Yes Yes					
Step & Step & repeat ON/OFF No Yes & Scale repeat Yes Yes repeat Rotation Yes Yes Mirror Yes Yes Arrange in the center Yes Yes Type Yes Yes Offset Yes Yes Reference line Yes Yes					
& Scale Yes Yes repeat Rotation Yes Yes Mirror Yes Yes Arrange in the center Yes Yes Type Yes Yes Offset Yes Yes Reference line Yes Yes	6	Sten			
repeat Rotation Yes Yes Mirror Yes Yes Arrange in the center Yes Yes Type Yes Yes Offset Yes Yes Reference line Yes Yes					
Mirror Yes Yes Arrange in the center Yes Yes Type Yes Yes Offset Yes Yes Reference line Yes Yes					
Arrange in the center Yes Yes Type Yes Yes Offset Yes Yes Reference line Yes Yes					
Type Yes Yes Offset Yes Yes Reference line Yes Yes					
Offset Yes Yes Reference line Yes Yes					
1101010100 1110					
Label Yes Yes			Reference line	Yes	Yes
			Label	Yes	Yes

N. 1	Maioriton Tomalete					
No	Major item	Minor item	Favorite	Template		
7	Execution times		Yes	Yes		
8		Ink	Yes	Yes		
0	Special plate					
		Density	Yes	Yes		
		Created area	Yes	Yes		
		Special color automatic	Yes	Yes		
		composite				
		Composite order	Yes	Yes		
		Delete original job after plate	Yes	Yes		
		Creation				
9	Layer settings	Special color layer settings	Yes	Yes		
		Position correction	Yes	Yes		
		Size correction	Yes	Yes		
10	Jig printing	Jig ON/OFF	Yes	Yes		
	*2	Jig name	Yes	Yes		
		Scale	Yes	Yes		
		Rotation	Yes	Yes		
		Mirror	Yes	Yes		
11	Kebab print	Kebab ON/OFF	Yes	Yes		
	·	Scale	Yes	Yes		
		Rotation	Yes	Yes		
		Mirror	Yes	Yes		
12	Composite	Composite order	No	Yes		
		Retract	No	Yes		
13	Color replacement*1		No	No		

*1:

The Job Creator can only apply color replacement (color correction) settings to single-layer templates.

*2

Templates do not include the files shown below. If you wish to share a user template with another instance of RasterLink7, you must use the environment backup function or restore the backup job file to build the same environment.

- Jig definition file
- Device adjustment file
- Print area definition file
- Color adjustment file
- Device profile

(Device profile calibrated using the Calibration Tool)

Templates cannot be created from the following backup jobs.

- multiple pages
- Multilayer printing (Three-layer, Four-layer, Five-layer)
- Braille Printing
- 2.5D Texture Maker
- Variable Print
- PrintGroup

Menu	Description
View	Toggles the template display.
Update	Updates RasterLink7 to the latest information.
Info	Displays detailed information for the template. It also allows you to delete templates.
Create	Creates a template from a RasterLINk7 backup job.
Import	Imports a template.
Export	Exports a template.

Mimaki provide 16 types of templates for the UJV300DTF-75. Provides a description of the template.

#	Printing method	Resolution	Additional Information
1	Clear -> Color -> Clear(Matte)	1200 x 1200	
2		300 x 900	
3		600 x 1200	
4		600 x 600	
5	White -> Color -> Clear(Gloss)	1200 x 1200	
6		300 x 900	*1 Show the MULTI icon
7		600 x 1200	
8		600 x 600	*1 Show the MULTI icon
9	White -> Color -> Clear(Matte)	1200 x 1200	
10		300 x 900	*1 Show the MULTI icon
11		600 x 1200	
12		600 x 600	*1 Show the MULTI icon
13	Color -> White -> Clear(Matte)	1200 x 1200	%2 Show the MULTI icon
14		300 x 900	%2 Show the MULTI icon
15		600 x 1200	Show the MULTI icon
16		600 x 600	※2 Show the MULTI icon

%1

In the job list of RasterLink7, it is displayed as a four-layer composite job with a clear bottom layer. However, when printing, it is printed as a three-layer job (white \rightarrow color \rightarrow clear). Adhesion is improved by ejecting a special white plate made by mixing the bottom-layer clear and the second-layer white.

※2

In the job list of RasterLink7, it is displayed as a four-layer composite job with a clear bottom layer. However, when printing, it is printed as a three-layer job (color \rightarrow white \rightarrow clear). Adhesion is improved by ejecting a special color plate made by mixing the bottom-layer clear and the second-layer color.

#	List display		Additional Information
1		UJV300DTF_ELS170_Clear-Color-Clear_HighQuality This template has the recommended conditions for Clear-Color-Clear 3-layer printing. Resolution: 1200x1200, Pass: 32 The top clear layer is corrected by +4 pixels using the "Special color size correction" function. This improves abrasion resistance.	Top layer is Matte feel effect. Create a 3-Layer job
2		UJV300DTF_ELS170_Clear-Color-Clear_HighSpeed This template has the recommended conditions for Clear-Color-Clear 3-layer printing. Resolution: 300x900, Pass: 8 The top clear layer is corrected by +4 pixels using the "Special color size correction" function. This improves abrasion resistance.	Top layer is Matte feel effect. Create a 3-Layer job
3		UJV300DTF_ELS170_Clear-Color-Clear_Quality This template has the recommended conditions for Clear-Color-Clear 3-layer printing. Resolution: 600x1200, Pass: 32 The top clear layer is corrected by +4 pixels using the "Special color size correction" function. This improves abrasion resistance.	Top layer is Matte feel effect. Create a 3-Layer job
4		UJV300DTF_ELS170_Clear-Color-Clear_Standard This template has the recommended conditions for Clear-Color-Clear 3-layer printing. Resolution: 600x600, Pass: 12 The top clear layer is corrected by +4 pixels using the "Special color size correction" function. This improves abrasion resistance.	Top layer is Matte feel effect. Create a 3-Layer job
5		UJV300DTF_ELS170_White-Color-ClearGloss_HighQuality This template has the recommended conditions for White-Color-ClearGloss 3-layer printing. Resolution: 1200x1200, Pass: 32 The top clear layer is corrected by +4 pixels using the "Special color size correction" function. This improves abrasion resistance.	Top layer is Gloss feel effect. Create a 3-Layer job
6	MULTI	UJV300DTF_ELS170_White-Color-ClearGloss_HighSpeed This template has the recommended conditions for White-Color-ClearGloss 3-layer printing. Resolution: 300x900, Pass: 8 The top clear layer is corrected by +4 pixels using the "Special color size correction" function. This improves abrasion resistance.	Top layer is Gloss feel effect. Create a 4-Layer job

#	List display	Additional Information
7	UJV300DTF_ELS170_White-Color-ClearGloss_Quality This template has the recommended conditions for White-Color-ClearGloss 3-layer printing. Resolution: 600x1200, Pass: 32 The top clear layer is corrected by +4 pixels using the "Special color size correction" function. This improves abrasion resistance.	Top layer is Gloss feel effect. Create a 3-Layer job
8	UJV300DTF_ELS170_White-Color-ClearGloss_Standard This template has the recommended conditions for White-Color-ClearGloss 3-layer printing. Resolution: 600x600, Pass: 12 The top clear layer is corrected by +4 pixels using the "Special color size correction" function. This improves abrasion resistance.	Top layer is Gloss feel effect. Create a 4-Layer job
9	UJV300DTF_ELS170_White-Color-Clear_HighQuality This template has the recommended conditions for White-Color-Clear 3-layer printing. Resolution: 1200x1200, Pass: 32 The top clear layer is corrected by +4 pixels using the "Special color size correction" function. This improves abrasion resistance.	Top layer is Matte feel effect. Create a 3-Layer job
10	UJV300DTF_ELS170_White-Color-Clear_HighSpeed This template has the recommended conditions for White-Color-Clear 3-layer printing. Resolution: 300x900, Pass: 8 The top clear layer is corrected by +4 pixels using the "Special color size correction" function. This improves abrasion resistance.	Top layer is Matte feel effect. Create a 4-Layer job
11	UJV300DTF_ELS170_White-Color-Clear_Quality This template has the recommended conditions for White-Color-Clear 3-layer printing. Resolution: 600x1200, Pass: 32 The top clear layer is corrected by +4 pixels using the "Special color size correction" function. This improves abrasion resistance.	Top layer is Matte feel effect. Create a 3-Layer job
12	UJV300DTF_ELS170_White-Color-Clear_Standard This template has the recommended conditions for White-Color-Clear 3-layer printing. Resolution: 600x600, Pass: 12 The top clear layer is corrected by +4 pixels using the "Special color size correction" function. This improves abrasion resistance.	Top layer is Matte feel effect. Create a 4-Layer job

#	List display		Additional Information
13	MULTI	UJV300DTF_ELS170_Color-White-Clear_HighQuality This template has the recommended conditions for Color-White-Clear 3-layer printing. Resolution: 1200x1200, Pass: 32 The top white layer is corrected by +4 pixels using the "Special color size correction" function. This improves abrasion resistance.	Top layer is Matte feel effect. Create a 4-Layer job
14	MULTI	UJV300DTF_ELS170_Color-White-Clear_HighSpeed This template has the recommended conditions for Color-White-Clear 3-layer printing. Resolution: 300x900, Pass: 8 The top clear layer is corrected by +4 pixels using the "Special color size correction" function. This improves abrasion resistance.	Top layer is Matte feel effect. Create a 4-Layer job
15	MULTI	UJV300DTF_ELS170_Color-White-Clear_Quality This template has the recommended conditions for Color-White-Clear 3-layer printing. Resolution: 600x1200, Pass: 32 The top clear layer is corrected by +4 pixels using the "Special color size correction" function. This improves abrasion resistance.	Top layer is Matte feel effect. Create a 4-Layer job
16	MULTI	UJV300DTF_ELS170_Color-White-Clear_Standard This template has the recommended conditions for Color-White-Clear 3-layer printing. Resolution: 600x600, Pass: 12 The top clear layer is corrected by +4 pixels using the "Special color size correction" function. This improves abrasion resistance.	Top layer is Matte feel effect. Create a 4-Layer job

