

Installation Guide

Manual Setup Edition

MIMAKI ENGINEERING CO., LTD.

https://mimaki.com/

D204013-11

Table of Contents

Precautions 4
About This Guide 5
Notation Used in This Guide 5
Symbols used in this guide 5
How to obtain this guide and related documents 5

Chapter 1 About RasterLink8

1.1 Introduction 8
System Configuration 8
1.2 Product Specifications and System Requirements 9
Product Specifications 9
System Requirements 10

Chapter 2 RasterLink8 Setup

2.1 How the setup procedure goes 14
2.2 Pre-installation Setup 15
2.3 RasterLink8 installation 17
Installation procedure 17
2.4 License activation 20
Issuing a Serial Key 20
When the RasterLinkPC has Internet access 20
When the RasterLinkPC has no Internet access 22
2.5 Profile installation 28
Profile Installation Procedure 28
2.6 Initial RasterLink8 startup 34
Initial startup procedure 34
Printer registration procedure 36
2.7 Mimaki driver and RasterLink8 version upgrade 45
Upgrade from MA2 45
Download of the installer from the official site 45

Chapter 3 RasterLink8 enhancements

3.1 Installation and version upgrade of RasterLinkTools 48
3.2 CuttingLink installation 49
System requirements 49
Installation procedure 49

Chapter 4 RasterLink8 uninstallation

4.1 Uninstallation procedure 52

4.2 How to deactivate the license 53
When the RasterLinkPC has Internet access 53
When the RasterLinkPC has no Internet access 54
4.3 Uninstallation procedure 59

Chapter 5 Troubleshooting

5.1 Troubleshooting related to license activation..... 62
Troubleshooting by case example 62
How to deactivate the license if the PC fails..... 63
5.2 When a duplicate name error occurs or hot folder creation fails when registering a printer 65
5.3 If a printer cannot be found when registering a printer 67

Precautions

- Any unauthorized use or reproduction, in part or whole, of this manual is strictly prohibited.
- The information in this manual may be subject to change without notice in the future.
- Note that some of the descriptions in this manual may differ from the actual specifications due to improvements and revisions to this software.
- Copying Mimaki Engineering Co. Ltd. software described in this manual to other disks (except for the purpose of backup) or loading it to memory other than for the purpose of running it, is strictly prohibited.
- With the exception of what is provided in the warranty provisions, Mimaki Engineering Co. Ltd. does not assume any liability for any damage (including, but not limited to, the loss of profit, indirect damage, special damage, or other monetary damages) resulting from the use or inability to use this product. The same shall also apply to cases where Mimaki Engineering Co. Ltd. has been advised of the possibility of damage in advance. For example, we shall not be liable for any loss of media (work) caused by use of this product or indirect losses caused by products created using the media.

RasterLink is a trademark or a registered trademark of Mimaki Engineering Co., Ltd. in Japan and other countries.

Adobe, the Adobe logo, Acrobat, Illustrator, Photoshop, and PostScript are the trademarks or registered trademarks of Adobe Inc. in the United States and other countries.

Apple, Macintosh, and macOS are registered trademarks of Apple Inc.

Microsoft, Windows, Windows 8.1, Windows 10, and Windows 11 are registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.

Other company names and product names described in this guide are trademarks or registered trademarks of their respective companies.

About This Guide

This manual explains the settings for installing RasterLink8 and making it ready for use.

Notation Used in This Guide

- The buttons and items displayed in screens are enclosed in square brackets [ ], such as [Finish] or [Full Color].
- Replace a printer name with the name of the product you are using.
- A PC in which RasterLink8 is installed is referred to as "RasterLinkPC".

Symbols used in this guide

		Details
	Important	The "Important" symbol represents information which you must know before using RasterLink8.
	Tip	The "Tip" pictogram indicates useful information.
	Reference information	Indicates reference pages with related information. Click on the text to display the corresponding page.

How to obtain this guide and related documents

The latest versions of this guide and related documents are available at the following location:

- Mimaki official website (https://mimaki.com/download/software.html)

Chapter 1 About RasterLink8



This chapter

This section provides an overview of RasterLink8.


Introduction.....8
System Configuration.....8
Product Specifications and System Requirements.....9
Product Specifications.....9
System Requirements.....10

1.1 Introduction

Thank you for purchasing this Mimaki product.

RasterLink8 is application software used for reading various types of image data and sending it as print data to an inkjet printer manufactured by Mimaki Engineering.

System Configuration

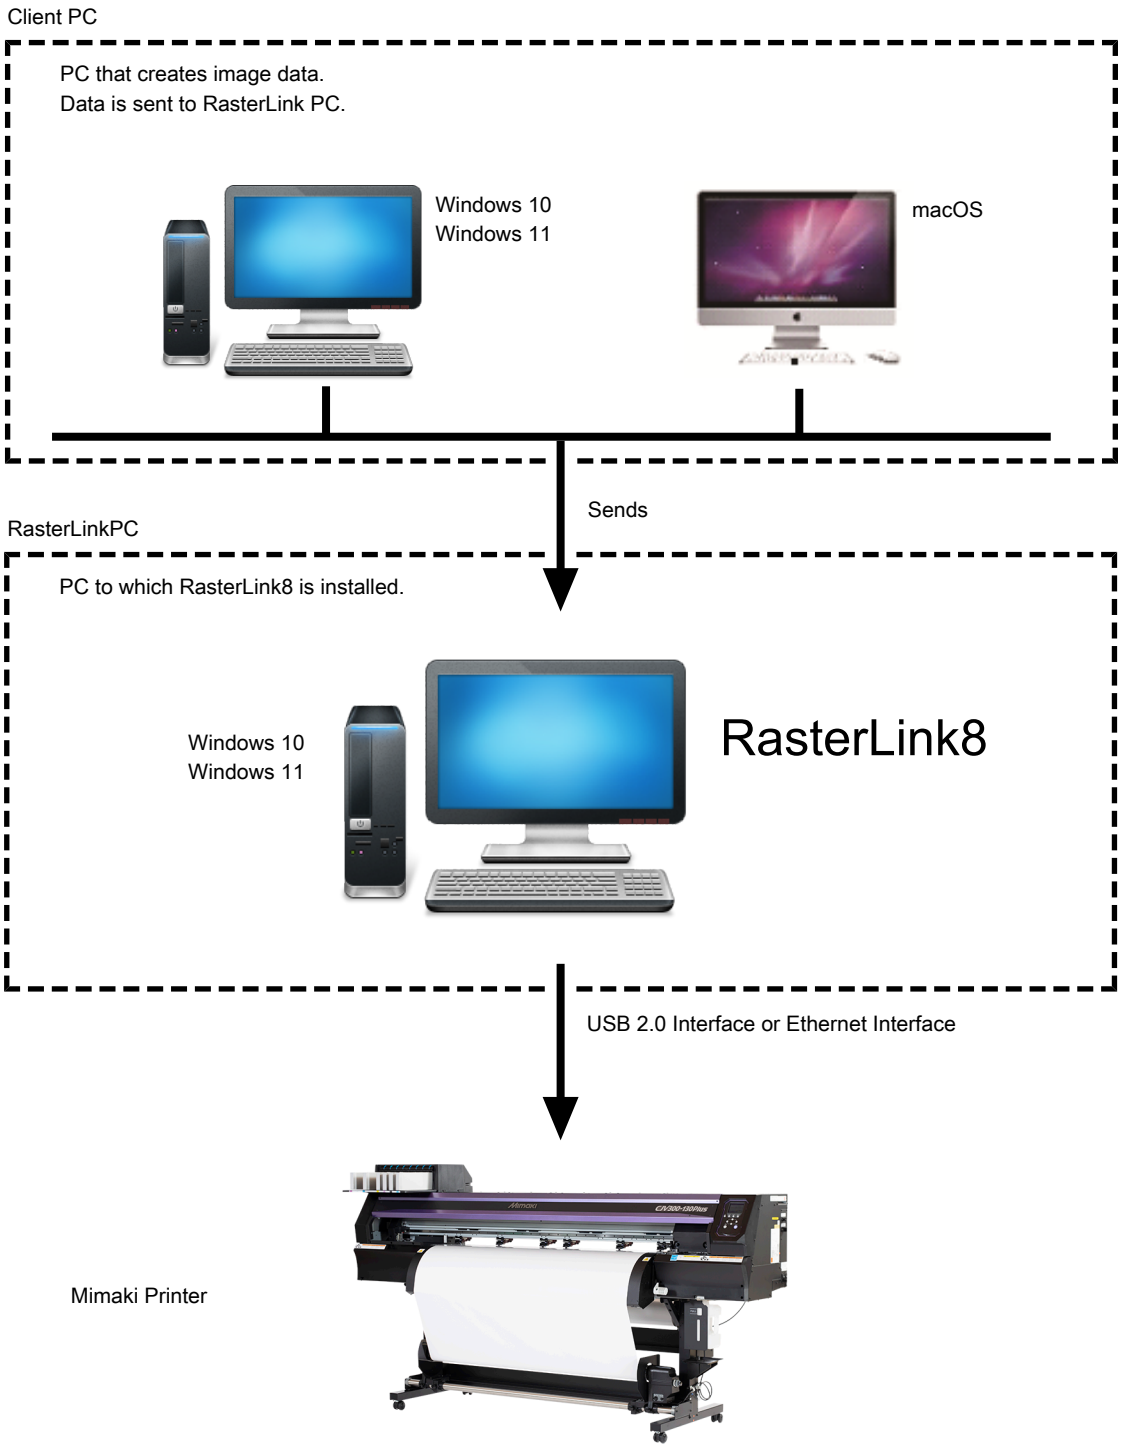

1.2 Product Specifications and System Requirements

Product Specifications

Supported Printers


RasterLink8 supports MIMAKI ENGINEERING ink-jet printers.
You can connect to up to 4 printers at the same time.

Input/Output Print Data

Input data format	PostScript (PS file), EPS, TIFF, JPEG, PNG, BMP, PDF*1*2 • AI is not supported. • The alpha channel is not available in TIFF data.
Design application	Adobe Illustrator CC or later Adobe Photoshop CC or later
PostScript font	Standard 35 European fonts A font cannot be added.
Spoolable image size	• Width direction: 5 mm to 10,871 mm • Feed direction: 5 mm to 10,871 mm
Maximum spoolable file size	2 GB
Maximum RIP-processible image size*3	• Width direction: 60 m • Feed direction: 100 m

*1. The supported PDF standards are as follows:
PDF1.3、PDF1.4、PDF1.5、PDF1.6、PDF1.7、PDF2.0、PDF/X-1a、PDF/X-3、PDF/X-4

The recommended PDF settings when saving a PDF in Adobe Illustrator are as follows:
[Standard] : [None]
[Compatibility] : [Acrobat 8(PDF 1.7)]

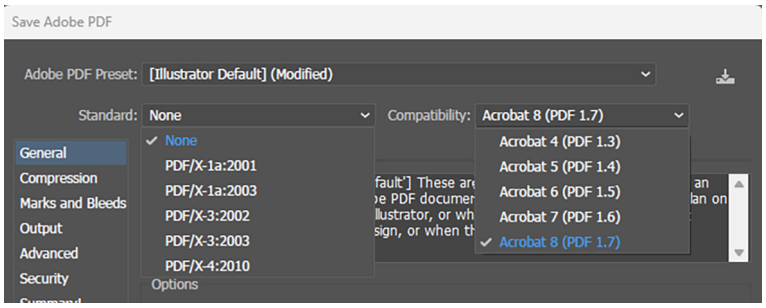

*2. - The following PDF functions are not supported:
PDF1.5 or later: Layer, embedded movies, embedded Flash movies, password locking
PDF1.6 or later: 3D, JDF

*3. Depending on how you create print data, the software may fail to produce a raster image even in the image size listed above. If this happens, create the data differently or use application software to print divided data. If you use special color ink (such as white ink), the maximum size in the width direction may be limited depending on the resolution. Refer to the "maximum drawing range" that is described in the instruction manual of your printer.

System Requirements

RasterLink8 installation PC

● Operating System

Important! • If our company's software does not operate correctly in the operating environment listed,it may be due to the version of OS/browser, etc.
If you are using an older version of OS/browser, etc.,we recommend updating your environment to the latest version to use.

OS*1	Microsoft® Windows 10® Home (64-bit version) Microsoft® Windows 10® Pro (64-bit version) Microsoft® Windows 10® Enterprise (64-bit version) Microsoft® Windows 11® Home Microsoft® Windows 11® Pro

*1. Windows 10: Version 2004 or later

● Recommended System

OS	Windows® 11 Pro 64bit
CPU	Intel® Core™ i5 -10500 (3.0 GHz) or higher*1
Memory	8GB or more*2
Hard disk drive	Free space of 1 TB or more (NTFS format)
Interface	Ethernet port*3, USB2.0*4

*1. Use genuine Intel CPU and chipset. Otherwise, an error may occur during printing, causing the printer to stop printing.

*2. At least 16GB of RAM is recommended for parallel RIP.
For the NEXA-160UV, use 16 GB or more.

*3. It is required for license activation. (It is still required even if the system has no Internet access or a PPP-connected network device is used.)
(For Ethernet-connection-enabled printers only) An Ethernet port is required to connect the printer. Use a PC that supports 1000BASE-T (Gigabit). For details, refer to the Important section below.

*4. A USB2.0 port is required to connect to a printer. Do not use a USB hub and an extension cable when connecting to the printer. An error may occur during printing, causing the printer to stop printing.

Important! To print over the network, you need to have the environment below. Stable communication may not be possible if the specifications are lower than the following:
- PC: The LAN port supports the 1000BASE-T (gigabit) mode.
- Cable: CAT6 or CAT6A LAN cable.
- Hub (if used): It supports the 1000BASE-T (gigabit) connection.



- For the latest information, visit our official website (https://mimaki.com/).

● Limitations on Printing via Network

- The system is not available over a wireless LAN or on a PLC.
- The system is not available on a VPN.
- When used with a wireless LAN, the system may not be able to connect to a printer. In this case, disable the wireless LAN.
- The RasterLinkPC is available only when it is on the same segment as the printer.
- If the network experiences high load during data transfer to the printer (for example, downloading a video at the same time), the sufficient transfer rate may not be achieved.

Supported Colorimeters

The colorimeters that can be used with RasterLink8 are listed in the table below. However, the colorimeters that can be used differ depending on the function.

Display name on RasterLink8	Supported colorimeter	Manufacturer	Function		
			Color replacement of [Color Replacement] Settings Screen	Calibration Tool	Emulation Tool
i1Pro	i1Pro/i1Pro 2	X-Rite	OK	OK	OK
i1iO	i1iO 2	X-Rite	N/A	OK	OK
i1Pro3	i1Pro 3	X-Rite	OK	OK	OK
i1Pro3 PLUS	i1Pro 3 PLUS	X-Rite	OK	OK	OK
i1iO3 with i1Pro3	1iO 3 (with i1Pro 3 connected)	X-Rite	N/A	OK	OK
i1iO3 with i1Pro3 PLUS	i1iO 3 (with i1Pro 3 PLUS connected)	X-Rite	N/A	OK	OK
SpectroLFP	Spectro LFP	Barbieri	OK	OK	OK

N/A: Not available

Important! • When installing RasterLink8, driver of colorimeter is not installed. Install the driver for the colorimeter to be used separately.

Client PC

The client PC can use one of the OSs listed in the table below.
Depending on the OS of the RasterLinkPC, however, some client PCs cannot be connected or can be connected but their functionality is limited.
For details about the connection with the client PC, refer to the "Network Connection Guide" at our official website.

● OS for Windows Client PCs

OS	Microsoft® Windows 10® Home (64-bit version) Microsoft® Windows 10® Pro (64-bit version) Microsoft® Windows 10® Enterprise (64-bit version) Microsoft® Windows 11® Home Microsoft® Windows 11® Pro

● OS for Macintosh Client PCs

OS	macOS 10.12 to 10.15, macOS 11 to 26

Chapter 2 RasterLink8 Setup



This chapter

This chapter explains the installation procedure of RasterLink8 and the required setup tasks.

How the setup procedure goes 14
Pre-installation Setup 15
RasterLink8 installation 17
Installation procedure..... 17
License activation.....20
Issuing a Serial Key 20
When the RasterLinkPC has Internet access 20
When the RasterLinkPC has no Internet access..... 22
Profile installation 28
Profile Installation Procedure 28
Initial RasterLink8 startup.....34
Initial startup procedure 34
Printer registration procedure 36
Mimaki driver and RasterLink8 version upgrade 45
Upgrade from MA2.....45
Download of the installer from the official site 45

2.1 How the setup procedure goes



- When installing using Mimaki Application Assistant (MA2), refer to the separate "Mimaki Application Assistant User's Guide".

1. Pre-installation setup

☞ "Pre-installation Setup"(P. 15)

- Install the compatible Mimaki driver for the printer to be used.
  The Mimaki driver is required to register a printer and connect to a printer.
- Change the Windows Update settings.
- Turn off the sleep setting.

2. RasterLink8 installation

☞ "RasterLink8 installation"(P. 17)

- Download the installer from our official site and install RasterLink8.

3. License activation

☞ "License activation"(P. 20)

- Activate your license.

4. Profile installation

☞ "Profile installation"(P. 28)

- Install a profile that is suitable for your printer and ink.

5. Initial RasterLink8 startup

☞ "Initial RasterLink8 startup"(P. 34)

- Register a printer or printers.

6. RasterLink8 version upgrade

☞ "Mimaki driver and RasterLink8 version upgrade"(P. 45)

- Update your RasterLink8 to the latest version.

7. Network setup

- Configure the network settings, if required.
  RasterLink8The Hot Folder and Printer Driver functions of RasterLink7 enable you to read images from other PCs via a network.
  For details about the setup procedures, refer to the "Network Connection Guide" provided on our official website.

2.2 Pre-installation Setup

Before installing RasterLink8, do the following:


1 **If you are using Windows 11, please turn off the "Smart App Control" security feature.**

- If the security feature in Windows 11 (Smart App Control) is enabled, you may be unable to install software, or the software may not function properly.
  Go to [Settings] - [Privacy & security] - [Windows Security] - [App & browser control] - [Smart App Control settings] in the Windows Start menu and turn it off.

2 **Install the compatible Mimaki driver for the printer to be used.**

Important!

- The following screen may appear during installation. In this case, click [Install].

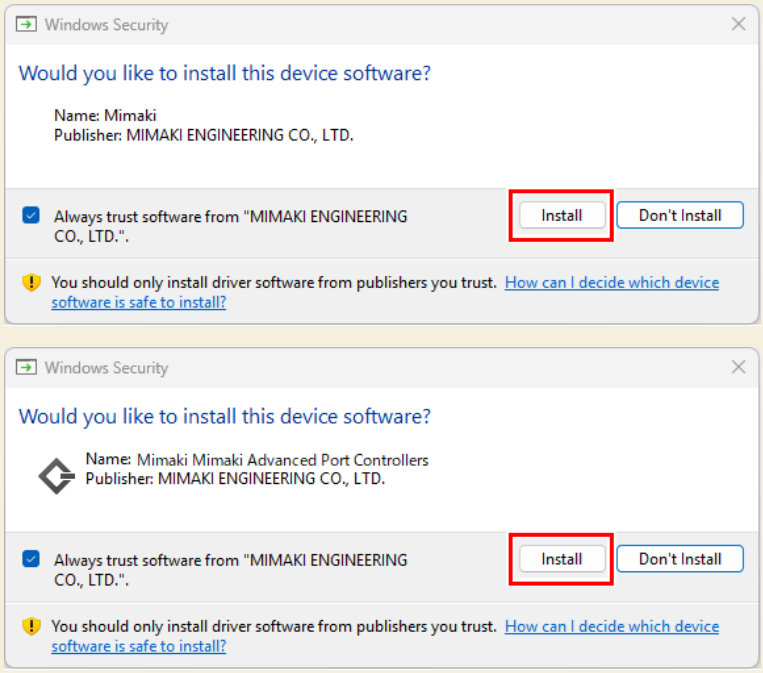

- The Mimaki driver can be downloaded from our official website (https://mimaki.com). Supported printers can be checked on the Mimaki driver download page.

Important!

- If you are using Mimaki driver v5.0.0 or later, "unitMDC.exe", which is required to start RasterLink8, may be detected incorrectly or removed by anti-virus software.
  After installing the Mimaki driver and before restarting your PC, make sure to set an exception (exclusion) for "C:/Program Files/Mimaki/MimakiDeviceController/unitMDC.exe" in the anti-virus software.

- **In Windows 11**

Important!

- Select [Settings] - [Windows Security] - [Core isolation], then disable [Memory integrity]. If it is enabled, it may not be possible to install the driver correctly, or it may not operate correctly.

3 Check the Automatic update settings of Windows Update.

- If the PC is restarted while RasterLink8 is running, launching RasterLink8 may not be possible. To avoid this, please configure the following settings:
- **In Windows 10**

  (1) Configure Windows Update to pause updates, so that the PC is not restarted automatically.
  You can change the setting by selecting:
  [Settings] - [Update and Security] - [Windows Update] - [Advanced Options] - [Pause Updates]

  (2) Specify the active hours, so that the PC is not restarted during the active hours.
  You can change the setting by selecting:
  [Settings] - [Update and Security] - [Windows Update] - [Change Active Hours] - [Active Hours]

- **In Windows 11**

  (1) Configure Windows Update to pause updates, so that the PC is not restarted automatically.
  You can change the setting by selecting:
  [Settings] - [Windows Update] - [Pause Updates]

  (2) Specify the active hours, so that the PC is not restarted during the active hours. You can change the setting by selecting:
  [Settings] - [Windows Update] - [Advanced Options] - [Active Hours]

4 Turn off the sleep setting.

- If the PC is configured to sleep (hibernate) automatically, it may go to sleep even when RasterLink8 is performing processing. In this case, the processing and printing will stop and the system for RasterLink8 may be corrupted.
  You can change the setting by selecting:
  [Control Panel] - [System and Security] - [Power Options] - [Change when the computer sleeps] and setting [Put the computer to sleep] to [Never]

Important!

- If the setting to turn off the screen is enabled, clicking the mouse or pressing a key to wake it up may result in unintentional operations being run in RasterLink8.
  To wake up the screen, either move the mouse without clicking it, or press the Esc key.

5 Change the Power mode setting to [Best performance].

- The RIP speed may be reduced if the Power mode is set to anything other than [Best performance]. Check the setting as follows:
  From the Windows [Start] menu, right-click then select [Power Options] - [Power mode].

2.3 RasterLink8 installation


Important!
- Install RasterLink8 as a user with the Administrator authority.

Download the installer from our official site (https://mimaki.com/download/software.html) and install it on the RasterLinkPC.

If the RasterLinkPC has no Internet access, follow the steps below to obtain the RasterLink8 installer.

- If you have a PC with Internet access, download the installer on the PC, and copy and install it on the RasterLinkPC.
- If you do not have an environment with Internet access, contact us or a distributor.

If the [User Account Control] screen appears before the installation menu opens, then click [Yes] to show the installation screen.

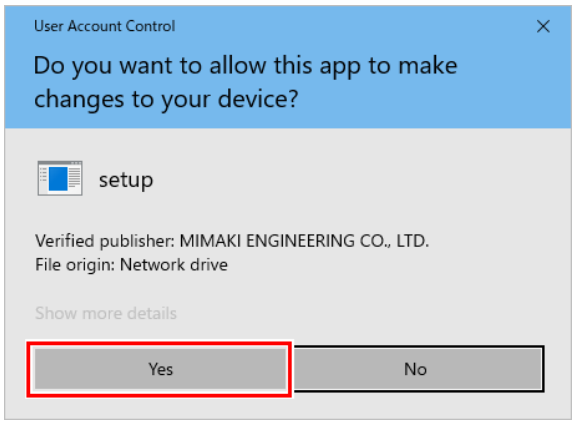

Installation procedure


- If Microsoft .NET Framework is not installed, the installer for .NET Framework is started. Install .NET Framework first.

1 **Download the RasterLink8 installer from our official site (https://mimaki.com/download/software.html) .**

2 **Double-click the file downloaded.**


- The file unzips automatically.
- The unzipped installer folder will be saved to the desktop. Delete the folder after installation is complete.

3 **The following window appears. Click [Install].**

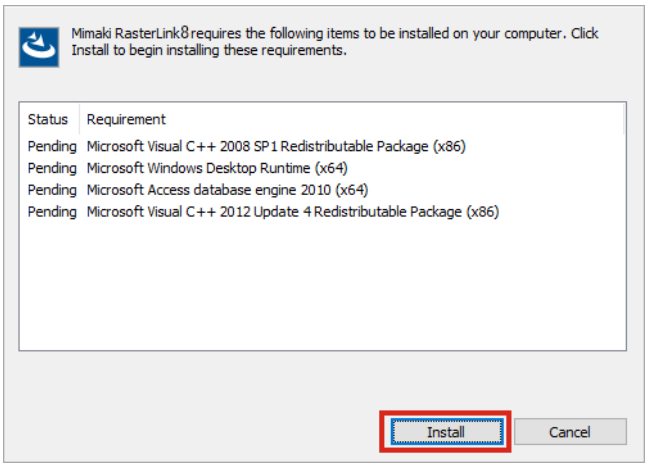


Important!

- The following dialog may appear if a Microsoft Office product has already been installed. If this appears, click [Yes] to continue with installation. (The dialog appears because the system is attempting to reinstall modules that are already installed. RasterLink and Office products are not affected.)

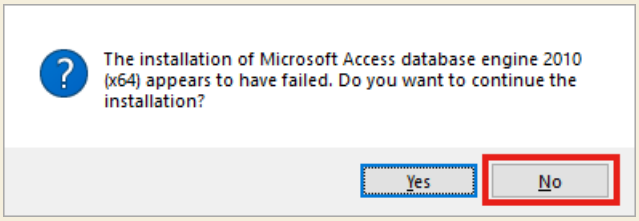


4 **Select the language of your choice during installation, and click [OK].**

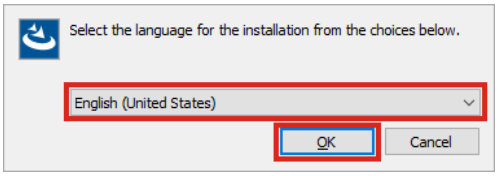

5 **Click [Next].**

6 **Select [I accept the terms in the license agreement], then click [Next].**

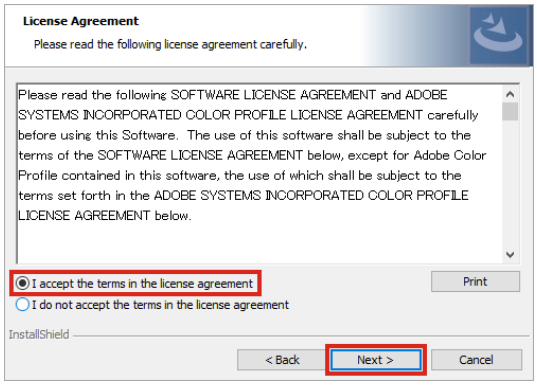


7 **Specify an installation destination and click [Next]**

- Specify a drive with the sufficient free space.

8 **Click [Install].**

- Installation starts.

9 **When the installation of RasterLink8 finishes, click [Finish].**

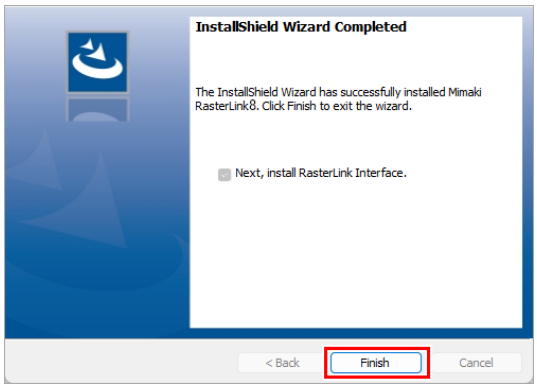

Important! • After RasterLink8 is installed, never remove any folders or files from the installation folder or rename any of them.

2.4 License activation

If you want to use RasterLink8 continuously, you need to active your license.
For license activation, the RasterLinkPC has to connect to the Internet.
(If the PC has no Internet access, you can use another PC that has Internet access for activation.)

Important! In license activation, the serial key and the information to identify the RasterLinkPC (which is generated automatically from the PC hardware configuration information) are sent to Mimaki Engineering.

- The license activation process uses the information from Ethernet equipment as hardware configuration information of the PC.
  Do not disable the Ethernet equipment that is enabled upon license activation. If you switch between wired and wireless connections, keep the equipment that has been used so far active.
  If you use a PPP-connected or USB-connected network device, enable Ethernet equipment.
- You can use the software without activating the license for 60 days from the first startup, which is a trial period.
  If you do not activate the license during the trial period, you can no longer use RasterLink8 after the period ends.
- The following functions will not be available if the license is not activated:
  · The following Profile Manager functions:
  - Profile downloading
  - Downloading optimal profiles

Issuing a Serial Key

The serial key is issued online using MA2.

For details on how to issue the serial key online, refer to the "MA2 User's Guide".

It can be viewed on the RasterLink8 product page.


- To install MA2, download it by searching for "mimaki" in the Microsoft Store, or download it from the RasterLink8 utility site, and then install it.

When the RasterLinkPC has Internet access

1 Start the license activation screen.

- From the [Start] menu, select [All apps] - [Mimaki RasterLink8] - [License].

2 Select [Activate] and then click [Next].

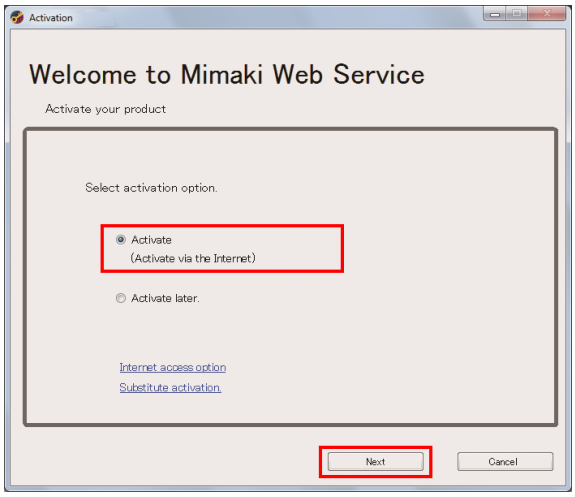

- If you are using a proxy server, then click [Internet access option] and configure the settings.

3 Configure the settings and click [Next].

- The activation process is started.
- When the license is activated successfully, the process is completed.




(1)	Serialkey	Enter the serial key issued online using MA2.

Important!

- If you are using a personal firewall, a connection confirmation screen may appear. In this case, allow the connection.

When the RasterLinkPC has no Internet access

If the RasterLinkPC has no Internet access, follow the steps below to activate the license:

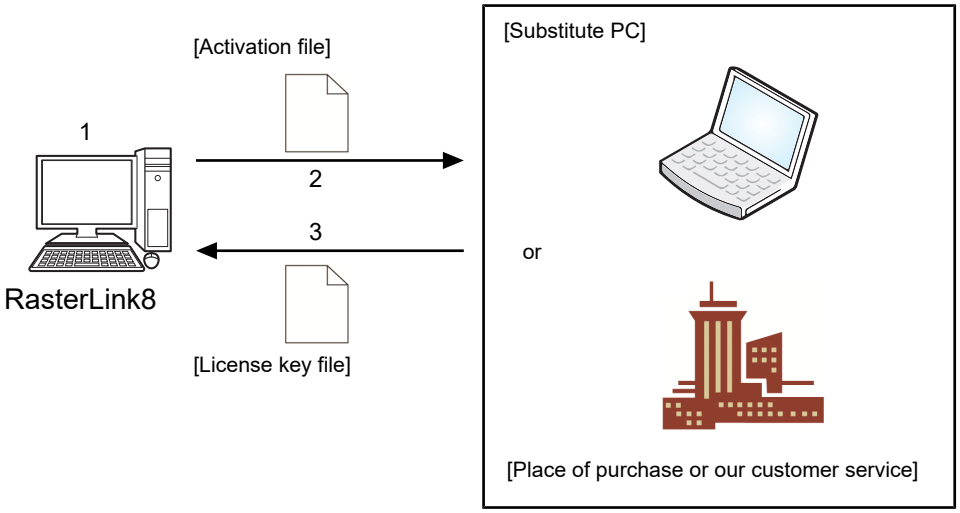

1 Create an activation file.

- Use RasterLink8 to create an activation file.
  "Creating the activation file"(P. 23)

2 Copy the activation file.


- If you have a PC with Internet access, copy the activation file to the PC and activate the license.
  "Steps on the substitute PC"(P. 25)
- If you do not have an environment with Internet access, you can send the activation file to us or a distributor for the purpose of license activation.
  When you activate the license, a license key file is created or sent. Copy the file to any location in the RasterLinkPC.

3 Load the activation file.

- On the RasterLinkPC, load the license key file and register the license key in RasterLink8.
  "Loading the license key file"(P. 26)

Creating the activation file

1 **Use step 1 in ☞ "When the RasterLinkPC has Internet access"(P. 20) to open the [Activation] screen and click [Substitute activation.].**

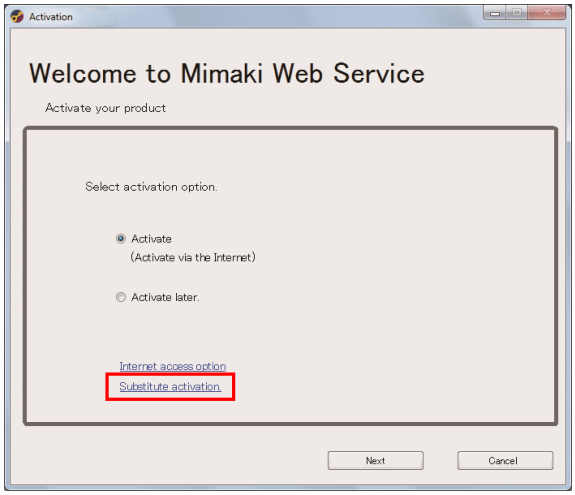


2 **Select [Create an activation file for substitute activation.].**

(1) Click [Browse].
- The [Save As] dialog box appears.


(2) Specify a storage location.

(3) Enter the name of the file to be saved, and click [Save].

(4) Click [Next].

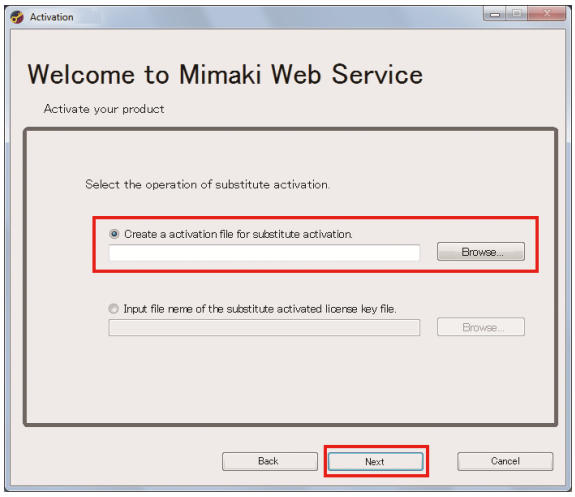


3 Configure the settings and click [Next].

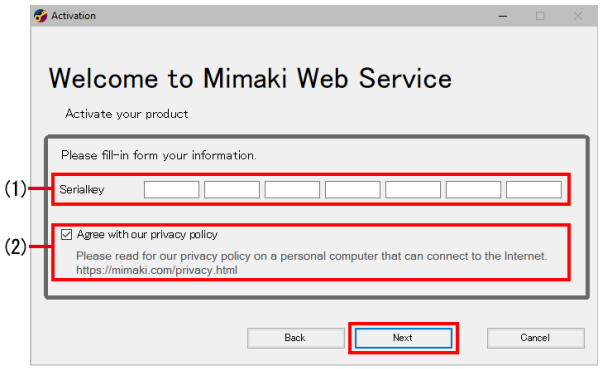

(1)	Serialkey	Enter the serial key issued online using MA2.
(2)	Agree with our privacy policy	Use the PC that has Internet access to read our privacy policy (https://mimaki.com/privacy.html), and select the [Agree with our privacy policy] check box. When the check box is selected, [Next] is enabled.

4 Click [Finish].

- The steps on the RasterLinkPC are done here.
- If you activate the license by using a substitute PC, then copy the activation file to the substitute PC.
- If you want to ask the distributor or us to activate the license, contact the relevant customer service department.

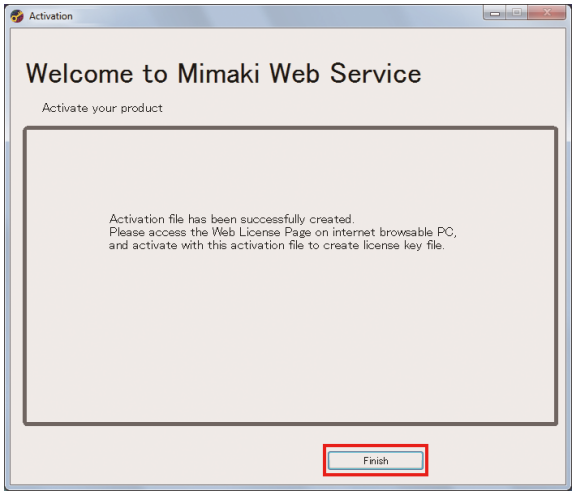


Steps on the substitute PC

1 **Start the web browser and enter the following URL.**

- http://miws.mimaki.jp/license/agencytop.aspx
- The license activation page appears.

2 **Click [Activation].**

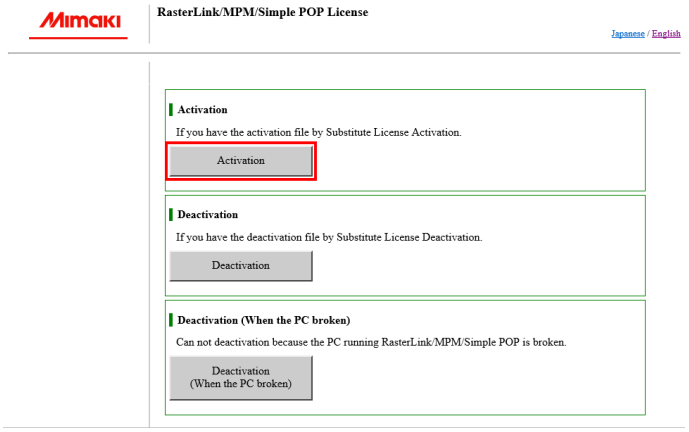

3 **Click [Browse].**

- In the [Open the file] dialog box that appears, specify the activation file that you saved in the RasterLinkPC.



4 **Click [Get license key].**



5 **In the [File Download] dialog box that appears, click [Save].**



6 **In the [Save as] dialog box that appears, enter any name and then click [Save].**


- The license key file is issued and downloaded.

7 **Copy the license key file you saved to any location in the RasterLinkPC.**

- Use it in ☞ "Loading the license key file"(P. 26).


Loading the license key file

1 **In the RasterLinkPC again, open the license activation screen and click [Substitute activation.].**

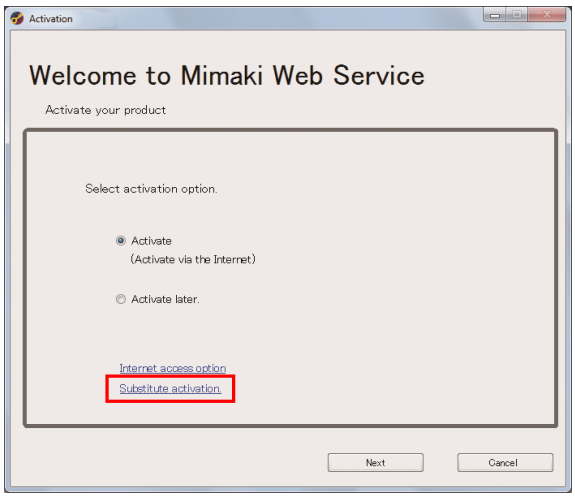


2 **Select [Input file name of the substitute activated license key file.] and click [Browse].**

- The [Open the license key file] dialog box appears. Specify the license key file and click [Next].

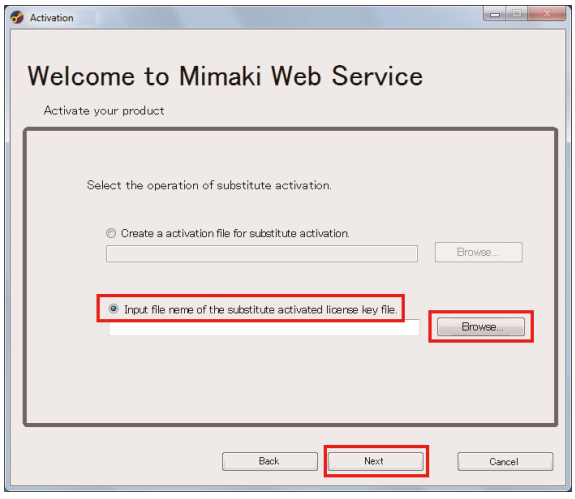

3 **Click [Finish].**

- The activation is finished.

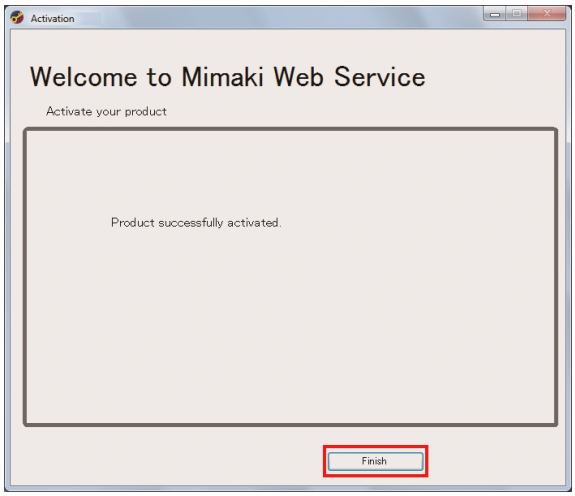

2.5 Profile installation

The following profiles are required to use RasterLink8.

- Input RGB profile
- Input CMYK profile
- Device profile

● Input profiles

The standard input RGB and input CMYK profiles are installed automatically when RasterLink8 is installed.
☞ "Installing the input profile"(P. 32)

● Device profile

You need to install the device profile by yourself. You can install it in the following two ways:

- ☞ "Install from folder"(P. 28)
- ☞ "Download from Internet and install"(P. 30)

These profiles are installed using Profile Manager.
Profile Manager is a tool for installing and uninstalling device profiles and input profiles.



- For details about profiles and Profile Manager, refer to the accompanying "RasterLink8 Profile Manager Reference Guide" on our official website.

Profile Installation Procedure

Starting the Profile Manager

From the [Start] menu, select [All apps] - [Mimaki RasterLink8] - [Profile Manager].



It can also be launched from RasterLink8.
- From the menu select [Tool] - [Profile Manager].
- [Printer Management] button on the printer management screen.

Installing the device profile

Install from folder




Device profiles can be obtained as follows:
- Downloading it from our official website (https://mimaki.com/)
- Creating it with MimakiProfileMaster3 (which is sold separately)

1 **Click the [Install from folder] icon.**




2 **Select the folder for the device profiles to be installed, then click [Select a folder].**


3 **Select the check box for the profiles to be installed, then click [OK].**

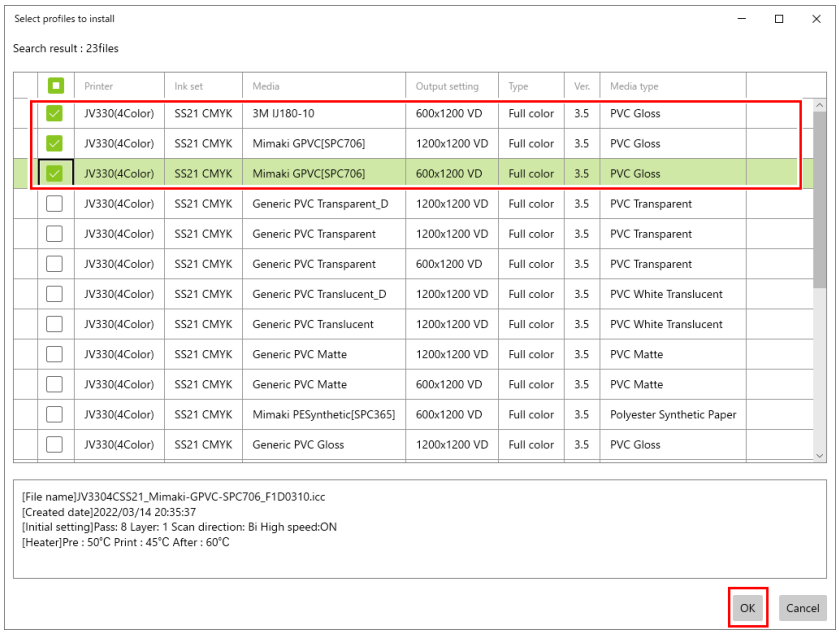

- The installed profiles are listed.

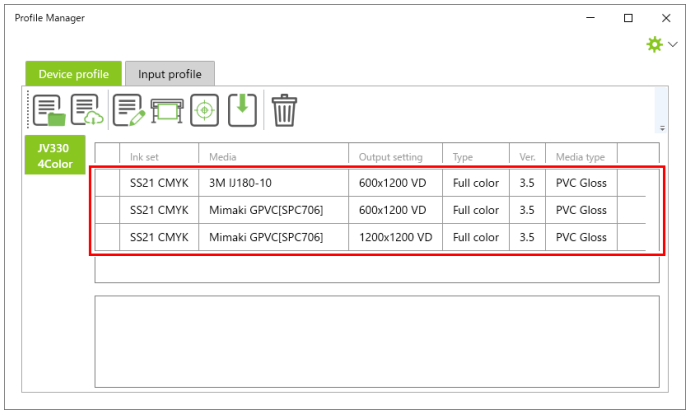


4 **Once all of the selected files have been installed, click the × at the top right of the screen to exit.**

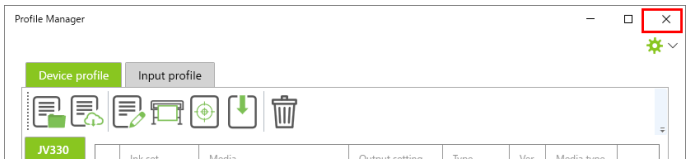


Download from Internet and install

Important! Use of this function is dependent on the following conditions:
- The RasterLink8 license has been activated
- An Internet connection is available

1 **Click the [Download] icon.**

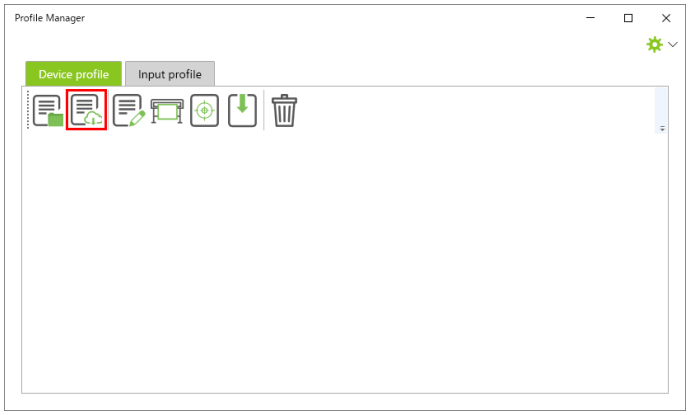


2 **Specify the model and inkset for the profile to be installed.**

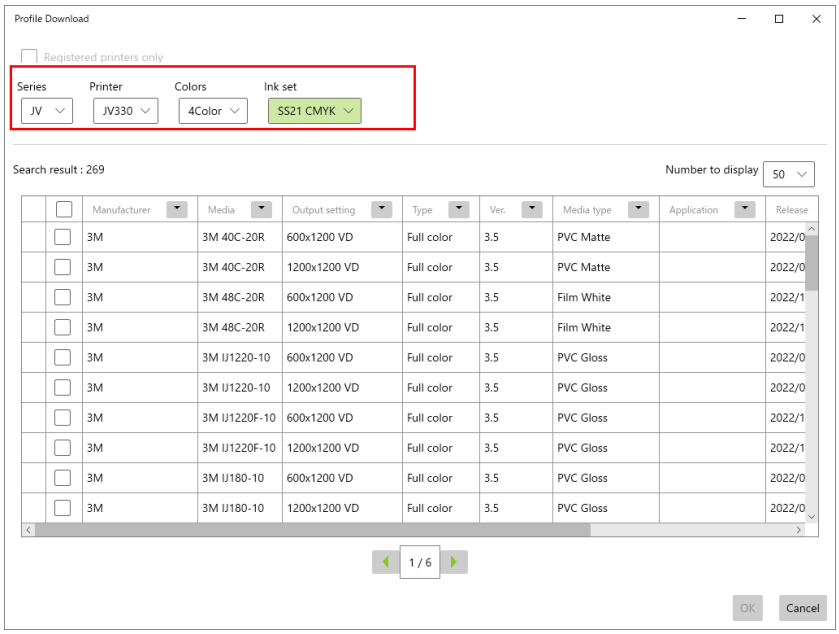


- Selecting the inkset starts the profile search.

3 Select the check box for the profiles to be installed, then click [OK].

- The download of the profile is started.
- [!] is displayed at the beginning of the list for any profiles that have already been installed.

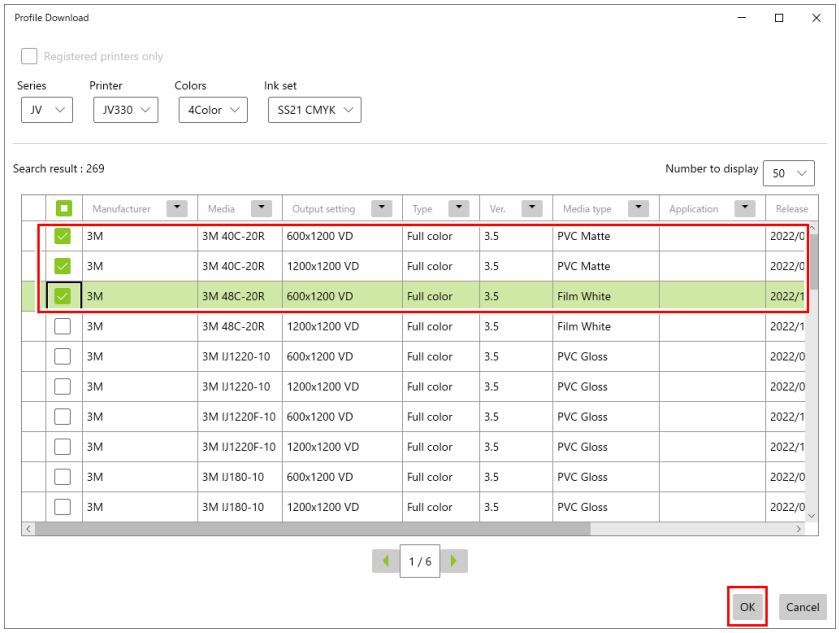

- The installed profiles are listed.

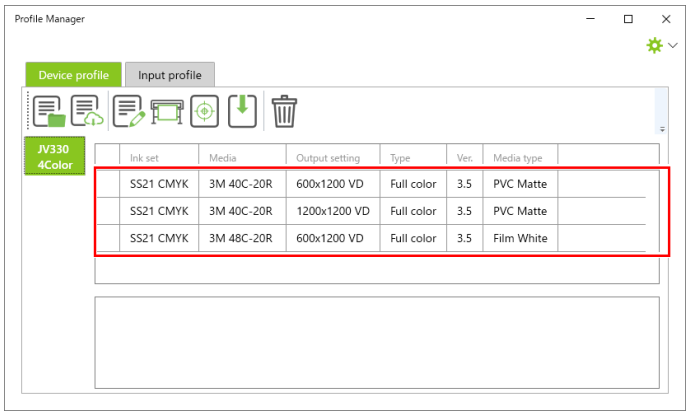

4 Once all of the selected files have been installed, click the × at the top right of the screen to exit.




Installing the input profile

When you install RasterLink8, the input profiles Mimaki Engineering provides are installed automatically. To use other input profiles, install using the following procedure:


Install from folder

1 **Select the [Input profile] tab, then click the [Install from folder] icon.**

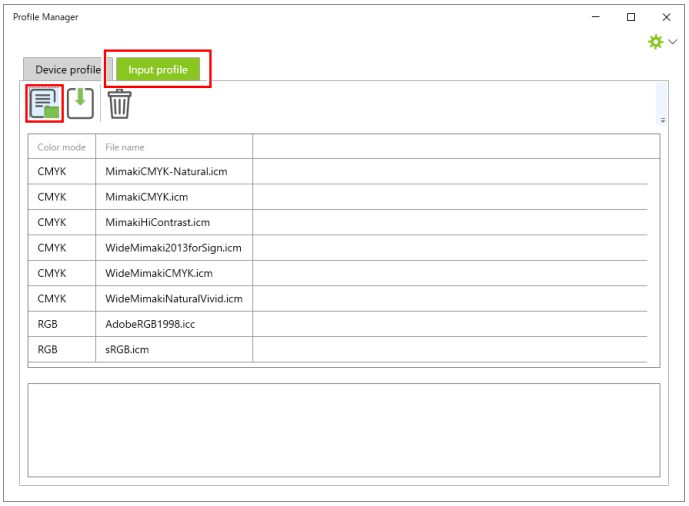


2 **Select the folder for the input profiles to be installed, then click [Select a folder].**

3 Select the check box for the profiles to be installed, then click [OK].

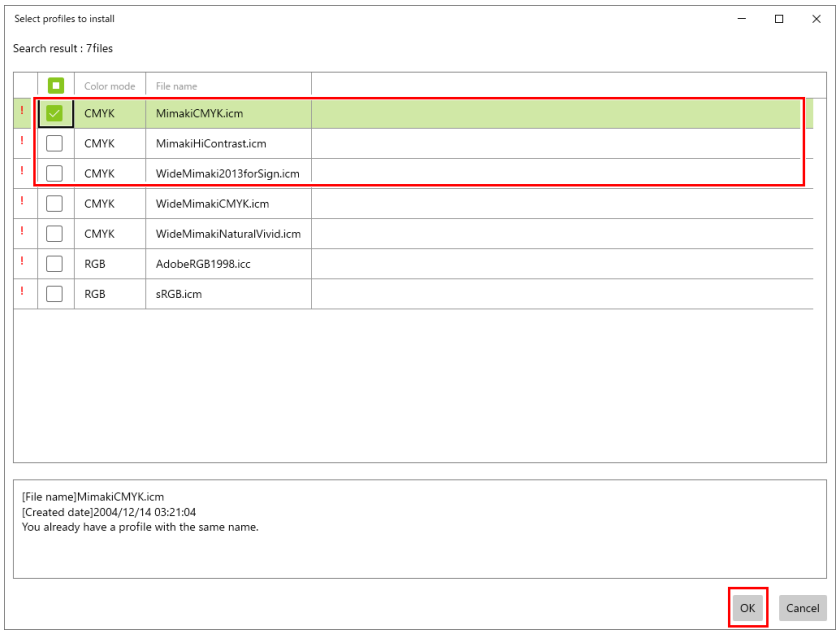

- The installed profiles are listed.

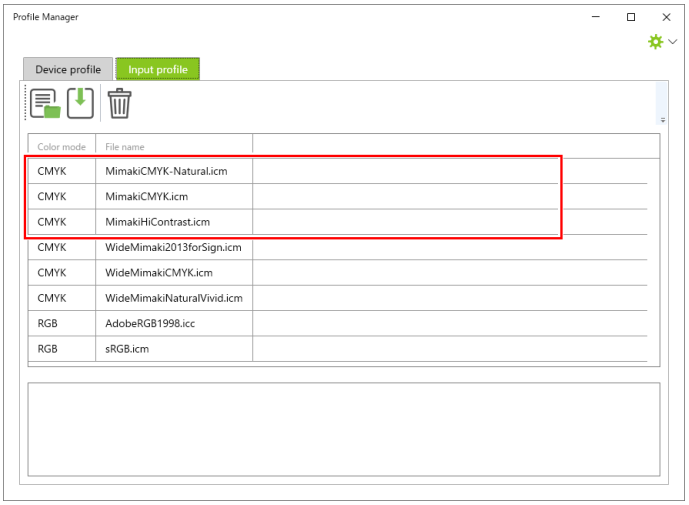

4 Once all of the selected files have been installed, click the × at the top right of the screen to exit.




2.6 Initial RasterLink8 startup


Important! Before starting RasterLink8, change the Windows Power mode setting to [Best performance].
- The RIP speed may be reduced if the Power mode is set to anything other than [Best performance]. Check the setting as follows:
  From the Windows [Start] menu, right-click then select [Power Options] - [Power mode].

Initial startup procedure

- The [Windows Defender Firewall has blocked some features of this app] warning window may appear during the initial startup. In this case, click [Allow access].

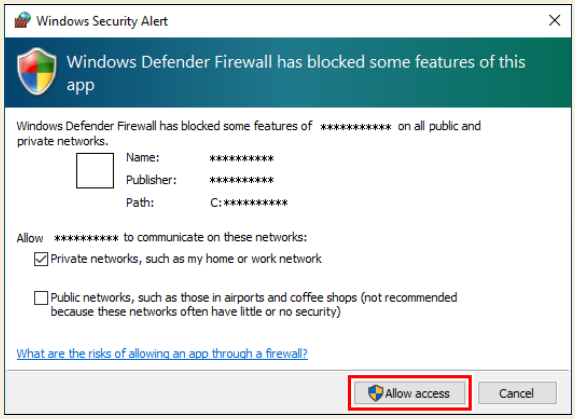

Important!
- The following screen may appear during the initial startup. In this case, click [Install].

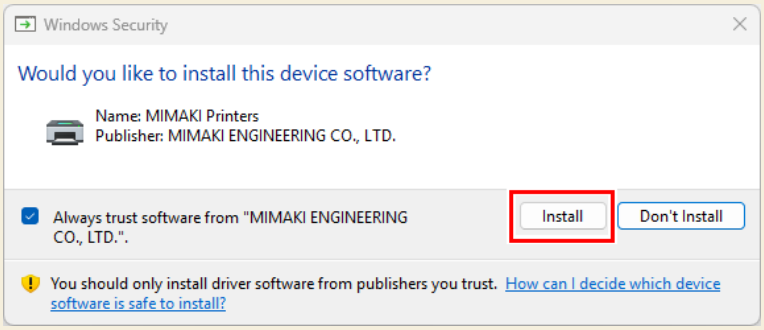


1 On the desktop, double-click the [Mimaki RasterLink8] icon .

- The [User Account Control] screen appears.

- To launch from the [Start] menu, select [All apps] - [Mimaki RasterLink8] - [Mimaki RasterLink8].

2 **Click [Yes].**

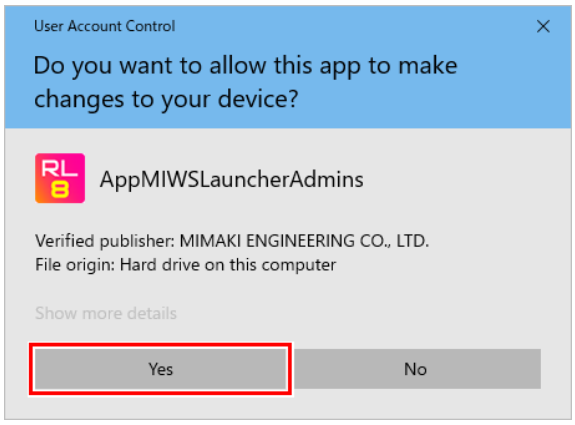

- If you see the symbol (shield) of the security center on the icon, executing the file shows the [User Account Control] screen. You then need to give authority to execute the file.

Printer registration procedure


No printer is registered right after RasterLink8 is installed. You can use the [Printer Management] function to register the printers you use.

Important!


- Before registering any printer, select [Control Panel] - [System and Security] - [Administrative Tools] - [Service] in Windows and enable [Windows Firewall] (which means the firewall is running). If [Windows Firewall] is set to disabled, you cannot register any printers.

1 **Turn on the printer you use, and check that the RasterLinkPC is connected with the printer through a USB 2.0 cable or a LAN cable.**

2 **In the [Printer Management] screen that appears when you start RasterLink8, if no printer is registered, click [Add].**

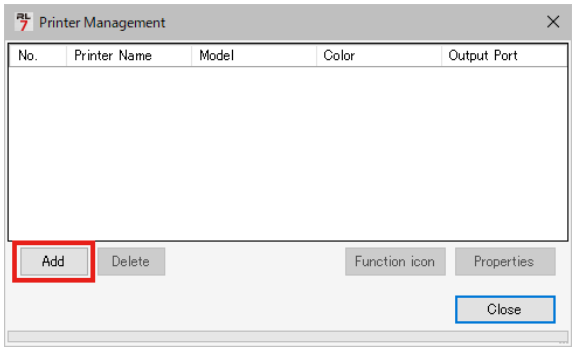


3 **Configure the settings in the order specified in the following figure and table, according to the printer to be connected:**

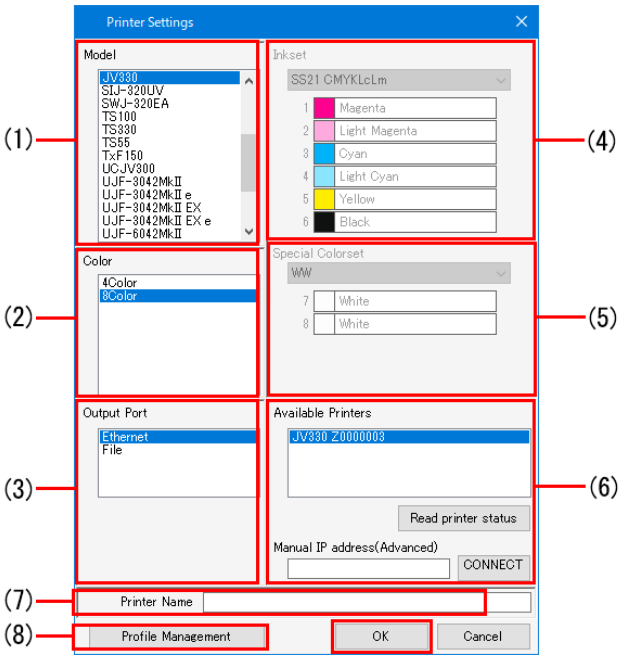

(1)	Model	Select the printer you want to register.
(2)	Color	Specify the number of colors available in the printer. If the printer has only one color setting, the list shows nothing. Depending on the printer, any of the following colors may be displayed. Check the printer instruction manual and the settings when the printer is installed before setting. • 4Color: Only CMYK (BMYK) is available. • 6Color: In addition to CMYK (BMYK), an ink set with up to 2 colors is available. • 8Color: In addition to CMYK (BMYK), an ink set with up to 4 colors is available. • 4Color+2: In addition to CMYK (BMYK), 2 spot colors are available. • 6Color+2: In addition to CMYK (BMYK), 2 spot colors and up to 2 colors are available.
(3)	Output Port	If the PC is connected with the printer through a USB2.0 cable, then select [USB2.0]. If it is connected through a LAN cable, then select [Ethernet].
(4)	Ink set	Select the inkset that is automatically retrieved from the printer.
(5)	Special Colorset	Select a special colorset.
(6)	Available Printers	A list of printers that are connected to the PC (as serial numbers of the printers or [MACHINE NAME] values specified in the panel) is displayed. Select the printer you want to register. If the connected printer is not displayed, click [Read printer status]. If it is not still visible, check the following: • Is the PC connected with the printer? • Is the printer turned on? • Is the compatible Mimaki driver installed for the printer to be registered? ☞ "Pre-installation Setup"(P. 15)
	Manual IP address(Advanced)	The IP address (IPv4) set for Mimaki printers can be connected by specifying directly.
(7)	Printer Name	The name is used as a printer tab name in the main window. Enter identifiable names if several printers are to be registered. This name is also used for the names of the hot folder and printer driver.
(8)	Profile Management	Launches the Profile Manager.

Important! **When using JFX600 or Tiger600-1800TS**

- It is recommended that [Ethernet] be selected for [Output Port] when registering. In this case, after registering the printer, specify the hot folder for shared use in MPC using [Select output folder] on the following printer status window.

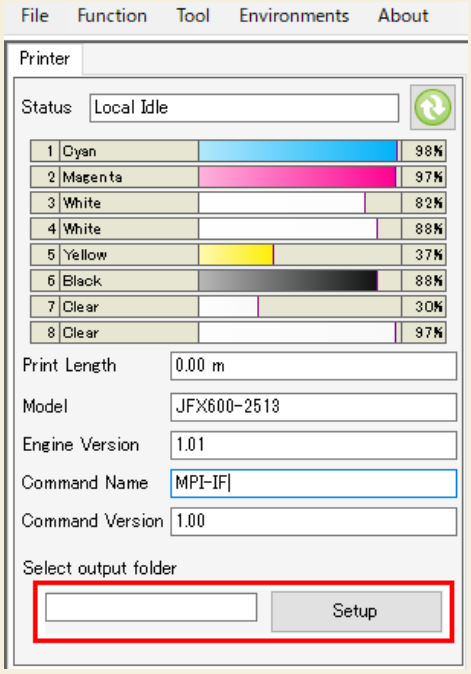

(1) For [Output Port]: [Ethernet]
- Printer status: Can be displayed
- Ink consumption calculation: Possible
- Output operation: Automatically output with the file name "YYYYMMDDhhmmss" to the specified output folder


(2) For [Output Port]: [File]
- Printer status: Cannot be displayed
- Ink consumption calculation: Not possible
- Output operation: Output destination specified each time

Important!


When using TxF150/TxF300

When the "White cartridge expansion option" is used, information for all of the ink cartridges added will be displayed for the remaining ink levels on the Printer Status screen.
Cartridges with the same letter indicated after the ink name form a single UISS set.
Example: TxF300

- Not using option

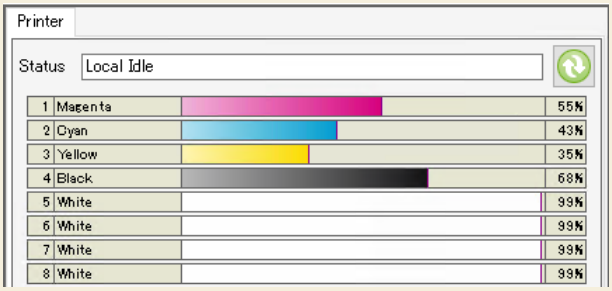

- Using option

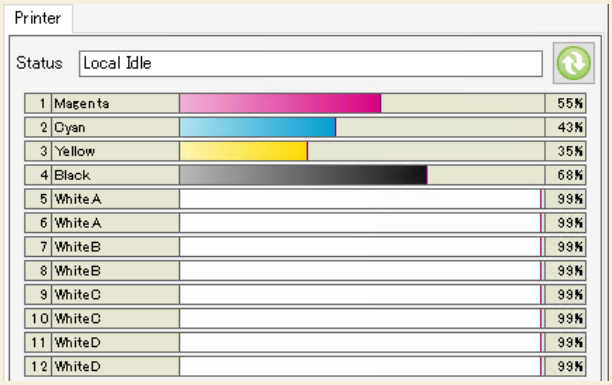

- Note
  Information for the additional ink cartridges is not included in the ink set display on the printer registration screen, regardless of whether the "White cartridge expansion option" is used or not.

Important! **When using Ts330 or TS200**

- Please note that there are restrictions on the profiles required for printer registration under the following conditions.

- **TS330**

No.	The ink set installed in the printer	Ink set for the profile required for printer registration	Ink sets for profiles that can be installed and used in RasterLink
1	Sublimation411 **BMYK**ViOrFyFp	**Sublimation411 BMYK**	• Sublimation411 BMYK • Sublimation411 BMYKViOrFyFp
2	Sublimation411 **BMYK**FyFp	**Sublimation411 BMYK**	• Sublimation411 BMYK • Sublimation411 BMYKFyFp
3	Sublimation411 **BMYKLbLm**FyFp	**Sublimation411 BMYKLbLm**	• Sublimation411 BMYKLbLm • Sublimation411 BMYKLbLmFyFp
4	Sublimation411 **BMYKLbLm**ViOr	**Sublimation411 BMYKLbLm**	• Sublimation411 BMYKLbLm • Sublimation411 BMYKLbLmViOr

- **TS200**


No.	The ink set installed in the printer	Ink set for the profile required for printer registration	Ink sets for profiles that can be installed and used in RasterLink
1	Sublimation411 **BMYK**ViOrFyFp	**Sublimation411 BMYK**	• Sublimation411 BMYK • Sublimation411 BMYKViOrFyFp

4 Click [OK].


Important!
- If the device profile that supports the selected printer, color, and ink set is not installed, the printer cannot be registered. Install the device profile.
☞ "Profile installation"(P. 28)

Important!
- Check the following if the "The printer name has been already used." error appears even when a printer with the same name has not been registered, or if hot folder creation fails when registering a printer.
When a duplicate name error occurs or hot folder creation fails when registering a printer (1)
When a duplicate name error occurs or hot folder creation fails when registering a printer (2)

5 Click [Yes].

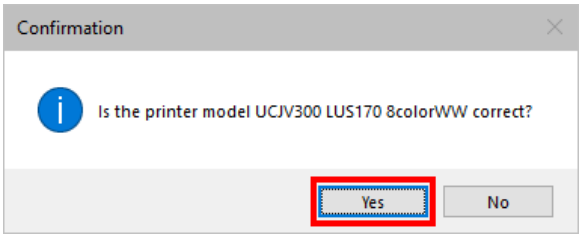


6 The [Do you create the hot folder and printer?] message appears. If you want to create a hot folder and printer that support the registered printer, click [Yes].

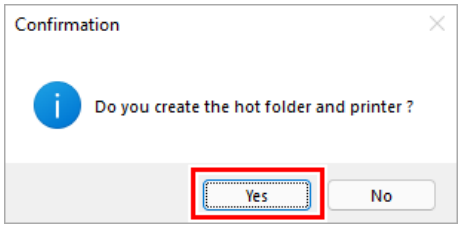


Important!
- If you have no particular reason, then click [Yes] to create the hot folder and the printer. (Even if you click [No] here, you can create the hot folder and the printer later.)
- For details about the hot folder and the printer, refer to the accompanying "RasterLink8 Reference Guide" and "RasterLink8 Network Connection Guide" or at our official website.

7 **The printer is added. Click [Close].**

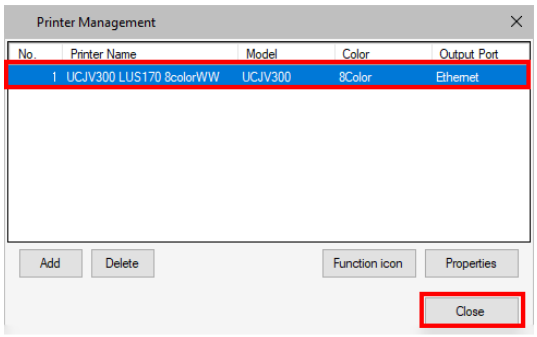

- The RasterLink8 main window appears.

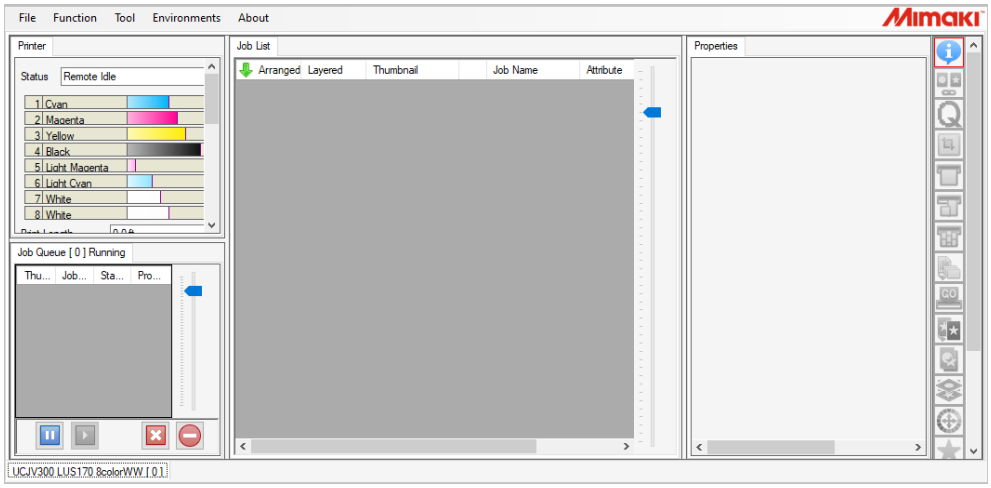

Cutting Device Registration Procedure


RasterLink8 can be used to send cut data directly to a supported cutting device. RasterLink8 allows a cutting device to be linked to a registered printer.

1 **Register the printer to be used.** ☞ **"Printer registration procedure"(P. 36)**

2 **Turn on the cutting device to be used, then check that the RasterLinkPC is connected by USB cable or LAN cable.**


3 **From the RasterLink8 menu, click [Environments] - [Printer Management].**

4 **Select the printer you intend to link with the cutting device, then click [Cutter device registe].**

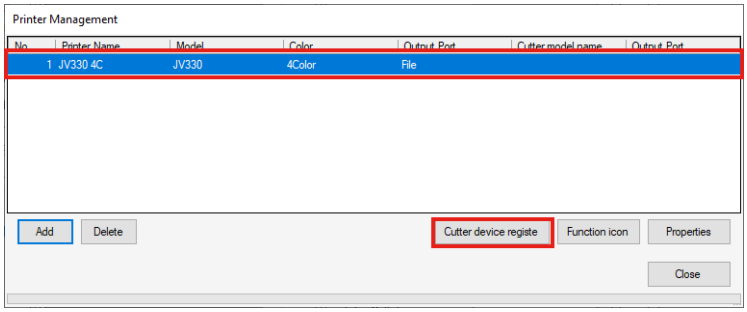

- The [Cutter device registe] window appears.


5 Set the following items:

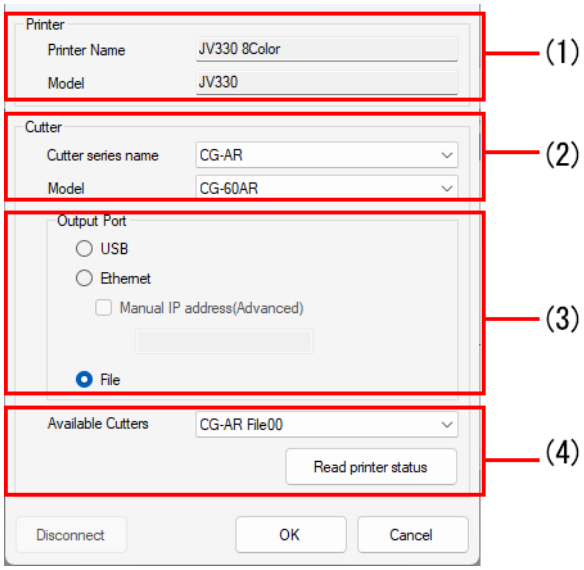

(1)	Printer	Information about the printer selected in [Printer Management].
(2)	Cutting device	Selects the series and model of the cutting device to be linked to the printer.
(3)	Output Port	If the printer is connected to the PC using a USB cable, then select [USB]. If it is connected using a LAN cable, then select [Ether].
(4)	Available cutting device	Lists the cutting device (cutting device name and serial number) connected using the method selected in [Output Port]. Select the device to be used. If the connected device is not displayed, click the [Read printer status] button. If the device is still not displayed even after clicking, check the following: • Check that the device is connected to the PC. • Check that the device is connected to the PC. • Check that the device is turned on. • Check that the Mimaki driver supporting the device to be registered has been installed. "Pre-installation Setup"(P. 15)

6 Click the [OK] button.

- The information is displayed for the linked cutting device on the [Printer Management] window.

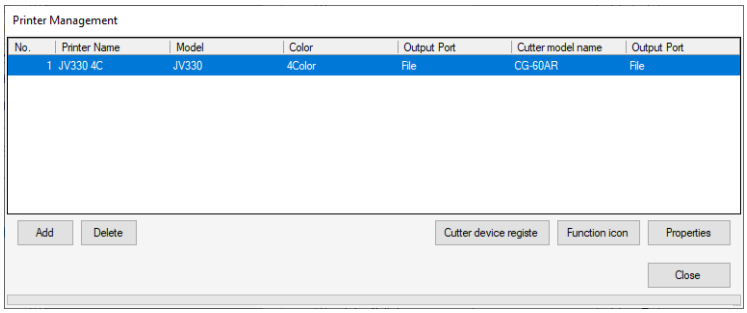

2.7 Mimaki driver and RasterLink8 version upgrade

You can update MimakiDriver and RasterLink8 to the latest version in the following ways:

- ☞ "Download of the installer from the official site"(P. 45)
- ☞ "Upgrade from MA2"(P. 45)

Upgrade from MA2

Update RasterLink8 to the latest version using Mimaki Application Assistant (MA2).

For more information, refer to the separate "MA2 User's Guide".

Download of the installer from the official site

You can also download the installer from our official site (https://mimaki.com/product/software/rip/raster-link8/download.html).

For how to version upgrade the software, visit the official site.

Important!

- We recommend that you visit the official website regularly.

Chapter 3 RasterLink8 enhancements



This chapter

RasterLink8 has the following two enhancements:
1. RasterLinkTools
2. CuttingLink

This chapter explains these two enhancements.

Installation and version upgrade of RasterLinkTools 48

CuttingLink installation 49
System requirements 49
Installation procedure.....49

3.1 Installation and version upgrade of RasterLinkTools

RasterLinkTools is an Adobe Illustrator plug-in tool to create print and cut data as well as images for special colors used in RasterLink6 or later. You must install the tool separately from RasterLink8.

For installation procedure, refer to the accompanying "RasterLinkTools Guide" at our official site.

3.2 CuttingLink installation

CuttingLink is a tool to manage cut data with ID Cut. You must install the tool separately from RasterLink8. For details, refer to the "ID Cut Guide" provided on our official website.

System requirements

The table below shows the requirements to install and use CuttingLink.

CuttingLink installation PC


OS	Microsoft® Windows 10® Home (32-bit/64-bit version) Microsoft® Windows 10® Pro (32-bit/64-bit version) Microsoft® Windows 10® Enterprise (32-bit/64-bit version) Microsoft® Windows 11® Home Microsoft® Windows 11® Pro

Installation procedure

1 **Go to our official website (https://mimaki.com/product/software/rip/raster-link8/download.html) and download the CuttingLink installer.**


2 **Double-click the installer.**

- The installer is started.

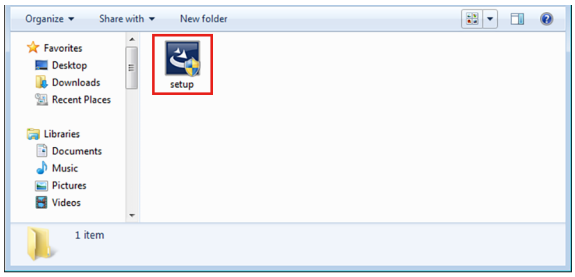


3 **Select the language you use during installation, and click [OK].**

- If Microsoft .NET Framework is not installed in the PC, the installer for .NET Framework is started. Install .NET Framework separately.

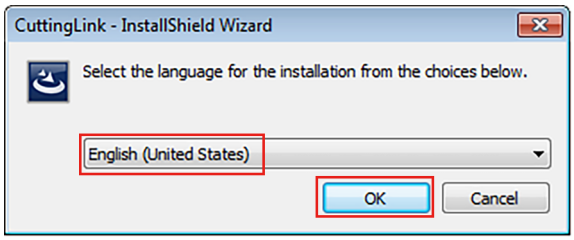

4 **Click [Next].**


5 **Select [I accept the terms in the license agreement], then click [Next].**

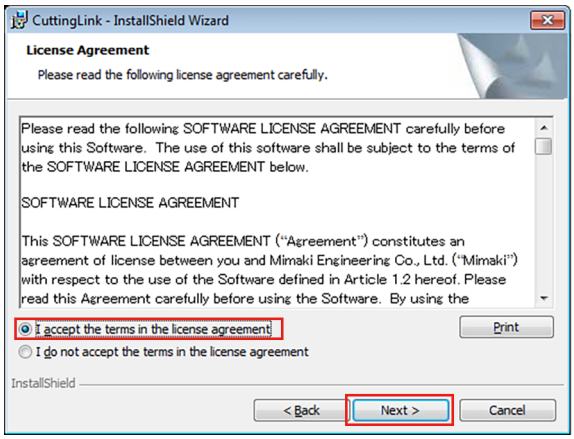

6 **Click [Install].**

7 **Click [Finish].**

- The installation is now completed.

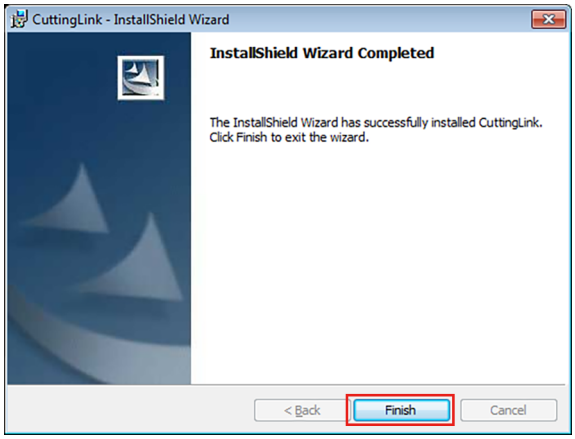

Chapter 4 RasterLink8 uninstallation



This chapter

This chapter explains the uninstallation procedure of RasterLink8.

Uninstallation procedure.....52
How to deactivate the license.....53
When the RasterLinkPC has Internet access 53
When the RasterLinkPC has no Internet access 54
Uninstallation procedure.....59

4.1 Uninstallation procedure

1. Deactivate your license

☞ "How to deactivate the license"(P. 53)

- Deactivate the license.

2. Uninstall RasterLink8

☞ "Uninstallation procedure"(P. 59)

- Uninstall RasterLink8.

4.2 How to deactivate the license

Before uninstalling RasterLink8, you need to deactivate your license.

You can deactivate it in the following two ways:

- "When the RasterLinkPC has Internet access"(P. 53)
- "When the RasterLinkPC has no Internet access"(P. 54)

Important!

- If you uninstall the software without deactivating the license, you will see a screen during uninstallation to prompt you to deactivate the license.
- Make sure you deactivate the license on the authenticated PC before installing the software in a different PC. If you do not deactivate the license, you cannot activate the license when installing RasterLink8 in another PC, resulting in failure to use the software continuously.

When the RasterLinkPC has Internet access

1 From the [Start] menu, select [Mimaki RasterLink8] - [License].


- The [Deactivation] screen appears.

2 Click [Next].

- If you are using a proxy server, then click [Internet access option] and configure the settings for the proxy server.
- The software connects to the server to deactivate the license.


Important!

- If you are using a personal firewall, a connection confirmation screen may appear. In this case, allow the connection.

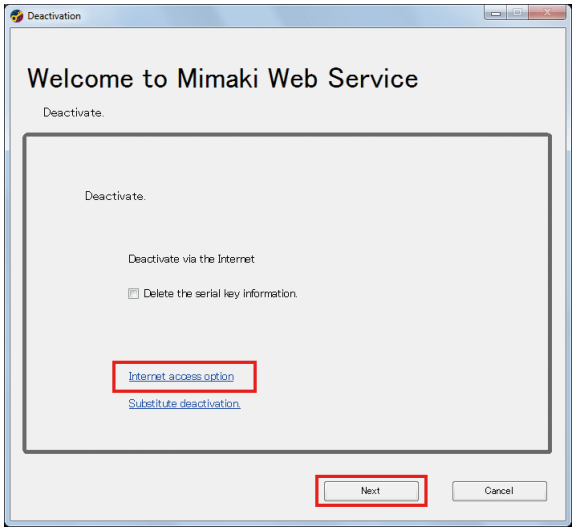


3 Click [Finish].

- The deactivation of the license is now completed.

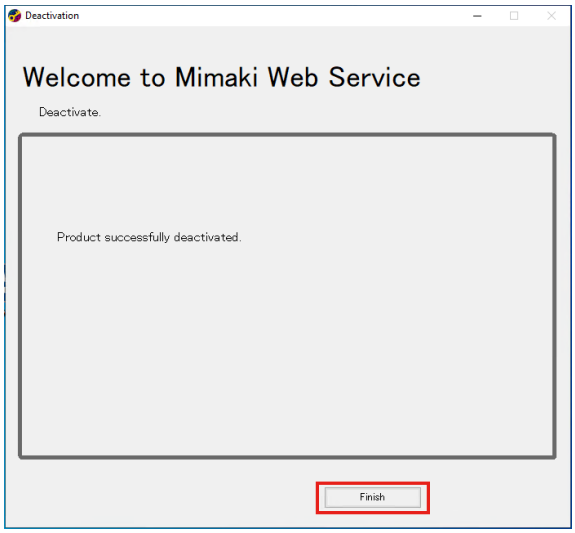

When the RasterLinkPC has no Internet access

If the RasterLinkPC has no Internet access, you can use a substitution, just like the substitute activation, to deactivate the license.

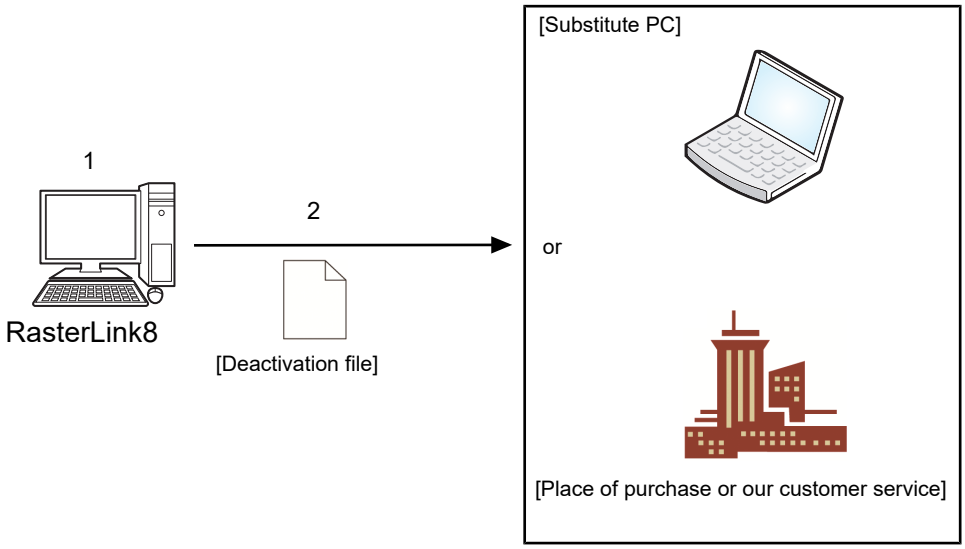

1 Create a deactivation file

- On the RasterLinkPC, create a deactivation file.
☞ "Operation on the RasterLinkPC"(P. 55)

2 Deactivate the license.


- If you have a PC with Internet access, copy the deactivation file to the PC and deactivate the license.
☞ "Steps on the substitute PC"(P. 57)
- If you do not have an environment with Internet access, you can send the deactivation file to us or a distributor for the purpose of license deactivation.

Operation on the RasterLinkPC

1 **From the [Start] menu, select [Mimaki RasterLink8] - [License].**


- The [Deactivation] screen appears.

2 **Click [Substitute deactivation.]**

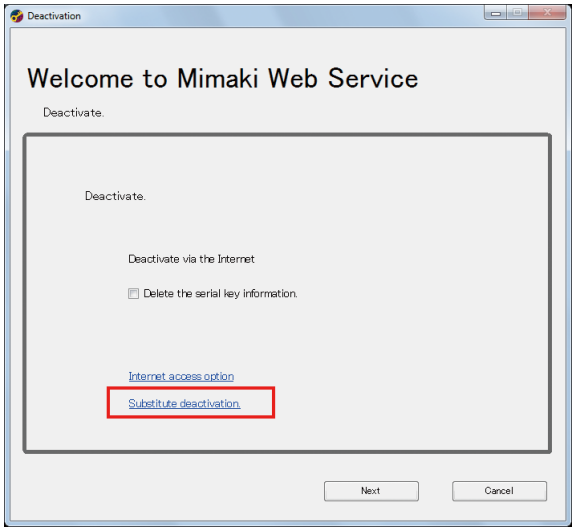


3 **Save the deactivation file.**

(1) Click [Browse].

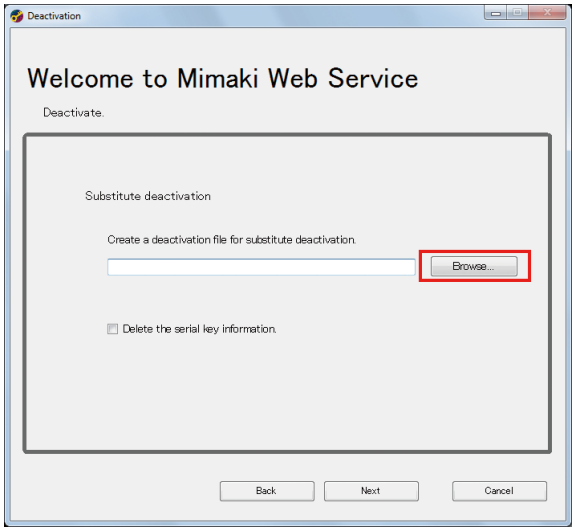


(2) In the [Select the deactivation file] dialog box that appears, enter any name and then click [Save].

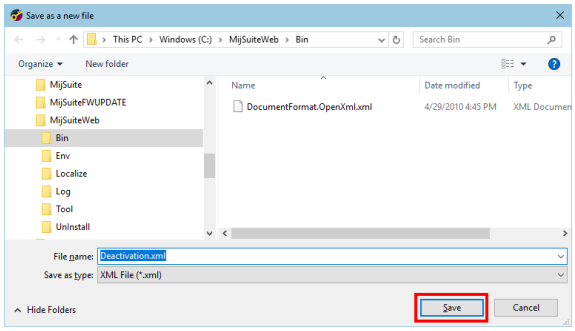


4 Click [Next].

- The deactivation file is created.

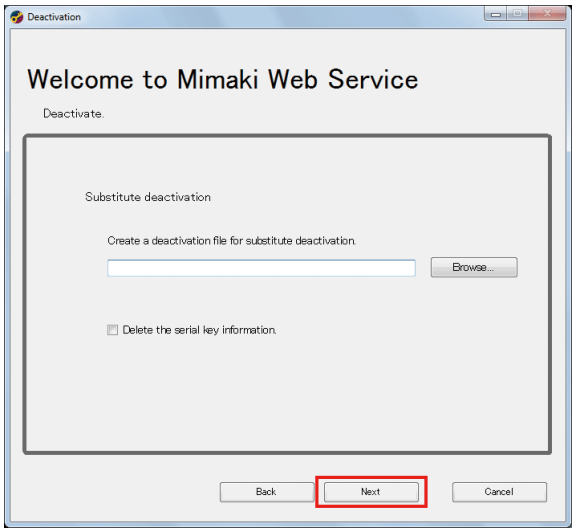

5 Click [Finish].

- The steps on the RasterLinkPC are now completed.
- At this point, the license for RasterLink8 has been deactivated and thus you cannot use the software.
- If you deactivate the license by using a substitute PC, copy the deactivation file to the substitute PC.
☞ "Steps on the substitute PC"(P. 57)
- If you want to ask the distributor or us to deactivate the license, contact the relevant customer service department.

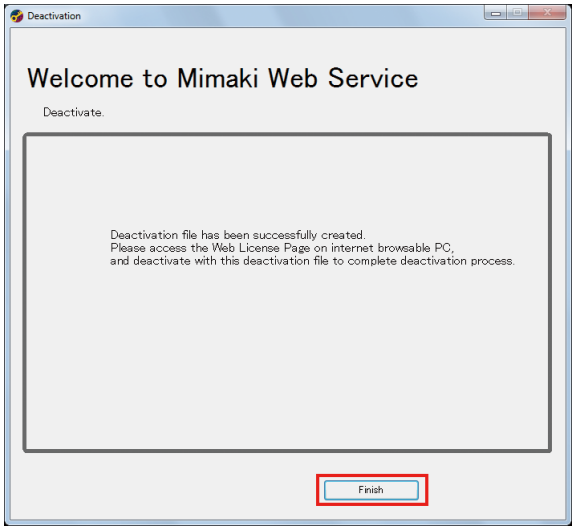


Important! • Keep the deactivation file in a safe place until the license deactivation is finished. If you lose the file before deactivation, you cannot deactivate the license and thus RasterLink8 is not available on another PC.


Steps on the substitute PC

1 **Start the web browser and enter the following URL.**

- http://miws.mimaki.jp/license/agencytop.aspx
- The license activation screen appears.

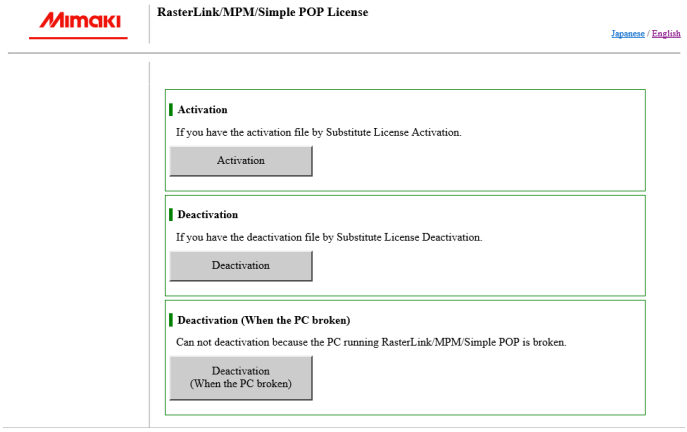


2 **Click [Deactivation].**

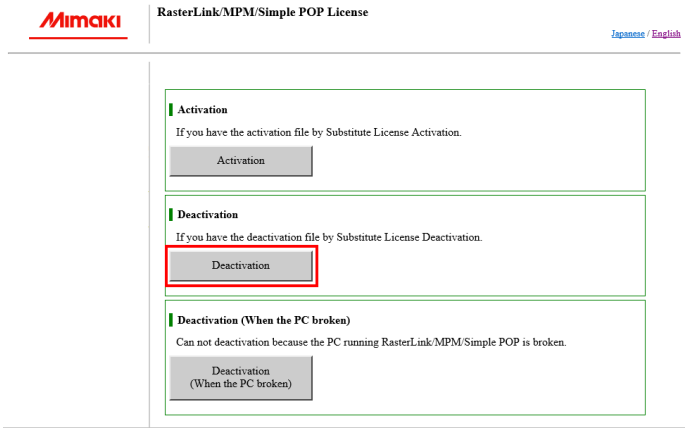

3 **Click [Browse].**


- The dialog box appears.

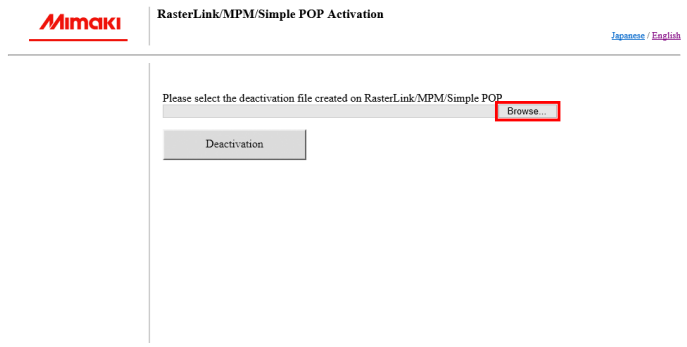

4 **Select the deactivation file you created on the RasterLinkPC and click [Open].**

5 Click [Deactivation].

- The deactivation of the license is now completed.

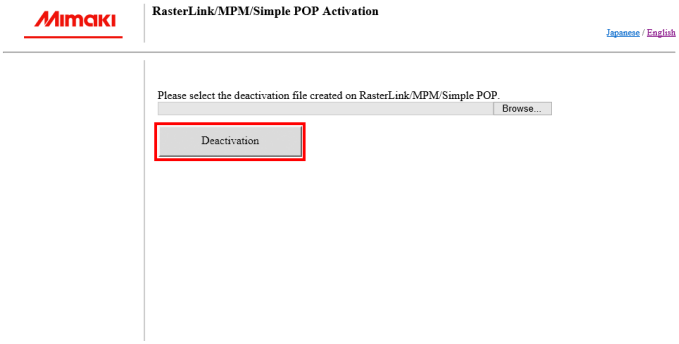


4.3 Uninstallation procedure

This section explains the uninstallation procedure of RasterLink8.


Important! When you perform uninstallation, all the settings for RasterLink8 will be removed. Before starting uninstallation, check that:

- RasterLink8 is not running.
- The license for RasterLink8 has been deactivated.
- The hot holder for RasterLink8 is not open (even via the network).
- Any printers registered in RasterLink8 are not used (even via the network).
- The hot folder and printer for RasterLink8 are not shared via the network connection with Macintosh (such as SMB) for use.

1 **Click [Settings] - [Apps] - [Apps & features].**

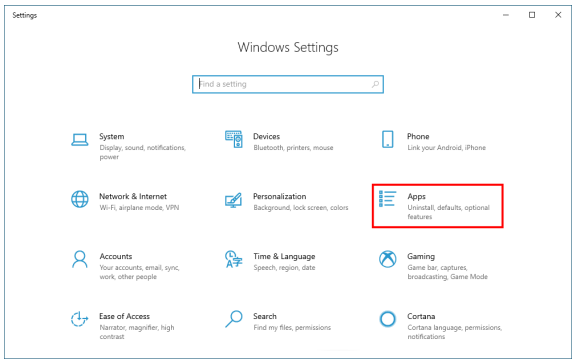


2 **From the list in [Apps & features], select [Mimaki RasterLink8], and then click [Uninstall].**

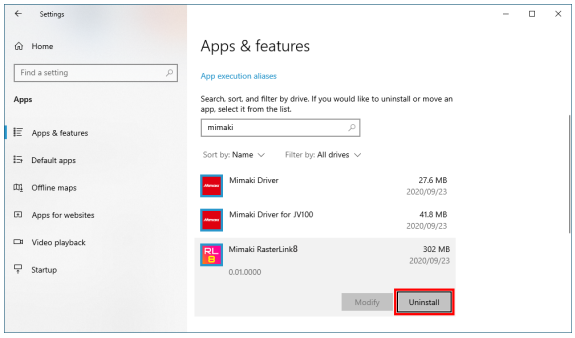

3 **Click [Uninstall].**

- Uninstallation starts.

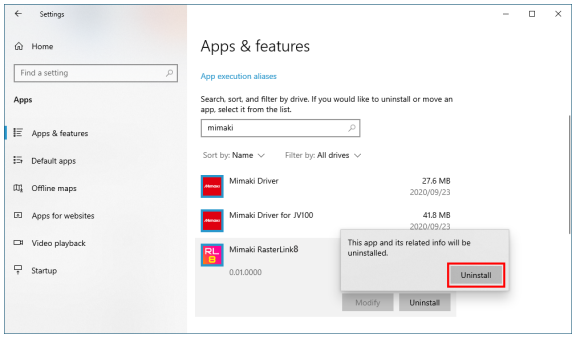


4 **Click [Yes] to restart the PC.**


- The uninstallation is now completed.

Important!

- If you have not deactivated the license, the screen to prompt you to do so appears.
  When you click [Yes], the [Deactivation] screen appears.
  ☞ "How to deactivate the license"(P. 53)
  After deactivating the license, you can continue the uninstallation.
  If you click [No], the uninstallation continues without license de-activation.

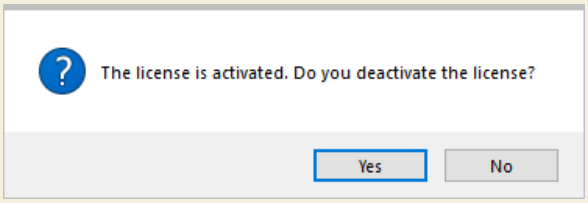

- You may see the message below during uninstallation. In this case, delete the installation folder manually after the uninstallation.

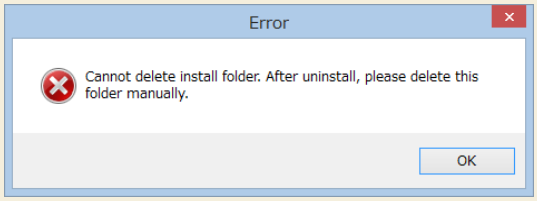

Important! If you reinstall RasterLink8 after uninstalling it, RasterLink8 may not work properly when the folders below remain. Make sure you delete the folders before reinstallation.

- Installation folder created in the previous installation
- Working folder used previously

Chapter 5 Troubleshooting



This chapter

Explains how to resolve problems that may arise and describes operation procedures that may be unclear.

Troubleshooting related to license activation ..62
Troubleshooting by case example 62
How to deactivate the license if the PC fails 63
When a duplicate name error occurs or hot folder creation fails when registering a printer..65
If a printer cannot be found when registering a printer 67

5.1 Troubleshooting related to license activation

This chapter explains how to deal with issues by case example and how to deactivate the license when the PC fails.

Troubleshooting by case example

This section describes how to troubleshoot issues when an error occurs during license activation.

If, without deactivating the license, you have

- Uninstalled RasterLink8
- Re-installed the OS
- Replaced the hard disk drive that has the OS

You can activate the license as many times as you want on the PC where you activated the license first, unless you activate the license on another PC.

● If you want to use RasterLink8 on the same PC again

(1) Reinstall RasterLink8.

(2) Start the license activation and enter the same serial key.

- The license is activated again.

● If you want to use RasterLink8 on a different PC

(1) On the web, perform the license de-activation process to disable the license.
☞ "How to deactivate the license if the PC fails"(P. 63)

(2) Install RasterLink8 in the PC where you want to use RasterLink8.

(3) Start the license activation and enter the serial key for the license you deactivated in step (1).

If you replaced the PC without deactivating the license

On the web, perform the license de-activation process to disable the license.
☞ "How to deactivate the license if the PC fails"(P. 63)

If you cannot use the software because an error message appears when running [Profile Update] after the PC was sent for repair

RasterLink8 collects information from specific devices on the PC when the license is activated. Any of the devices may be replaced when the PC was repaired. If this happens, you need to activate the license again. Follow the steps below to activate the license:

(1) On the web, perform the license de-activation process to disable the license.
☞ "How to deactivate the license if the PC fails"(P. 63)

(2) On the RasterLinkPC where the error occurred, start RasterLink8.

- The license is activated again.

If you lost the serial key

● If you realize the serial key was lost after you deactivate the license

In this case, the PC still has the serial key information if the [Delete the serial key information.] check box in the [Deactivation] screen was cleared when the license was deactivated. The check box is cleared by default.

In the serial-key-entry screen, check that the serial key you entered previously is displayed.

How to deactivate the license if the PC fails


If you cannot perform the normal license de-activation process and use RasterLink8 on any other PC, you can follow the steps below to deactivate the license.

Important!


- If you can use the normal license de-activation process, do not use this function. RasterLink8 may not be able to work properly.
☞ "How to deactivate the license"(P. 53)

1 **Open a web browser and enter the following URL.**


- http://miws.mimaki.jp/license/agencytop.aspx
- The license activation screen appears.

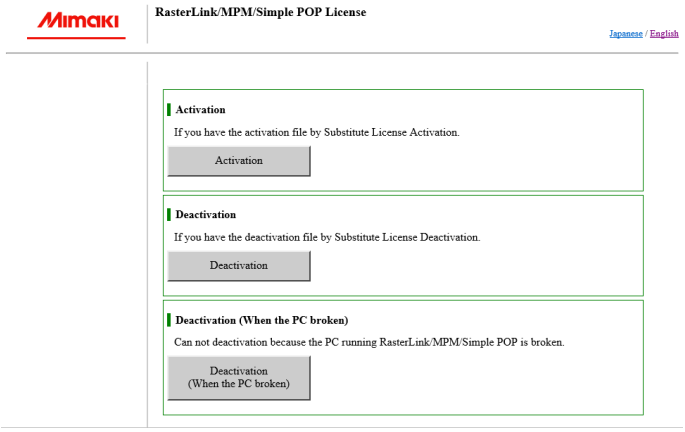

2 **Click [Deactivation (When the PC broken)].**

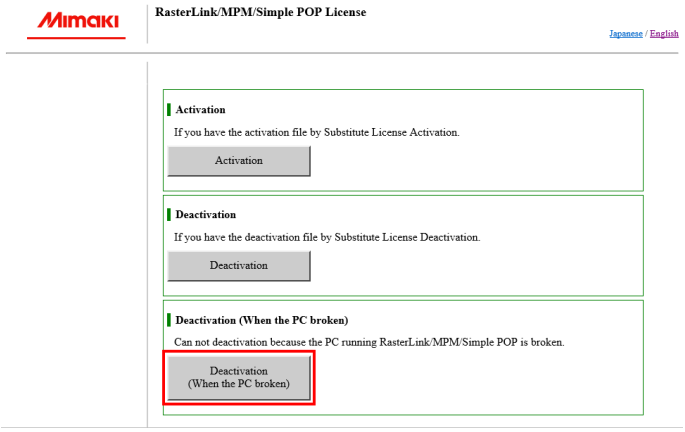


3 In the serial-key-entry form, enter the serial key for the activated license.

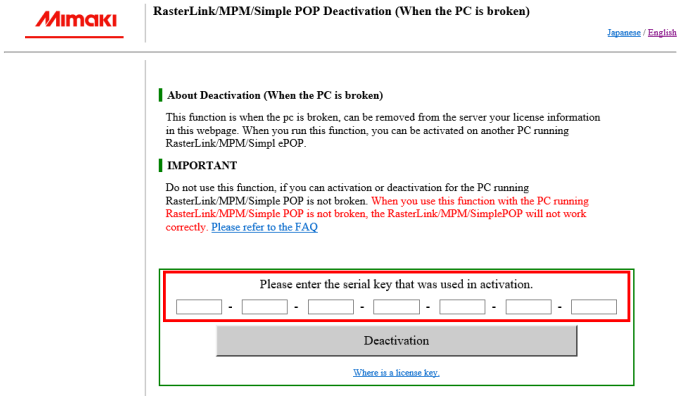

4 Click [Deactivation].

- The deactivation of the license is now completed.

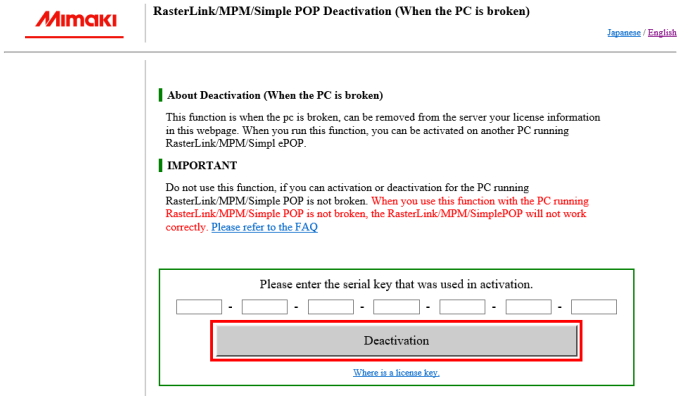

5.2 When a duplicate name error occurs or hot folder creation fails when registering a printer


If the "The printer name has been already used." error appears even when a printer with the same name has not been registered, or if hot folder creation fails when registering a printer, change the Windows date display format as follows:

1 **Exit RasterLink8.**


2 **Launch [Settings] from the Windows Start menu with the PC connected to the Internet.**

- The [Settings] screen appears.


3 **On the [Settings] screen, select [Time & language] - [Language & region].**

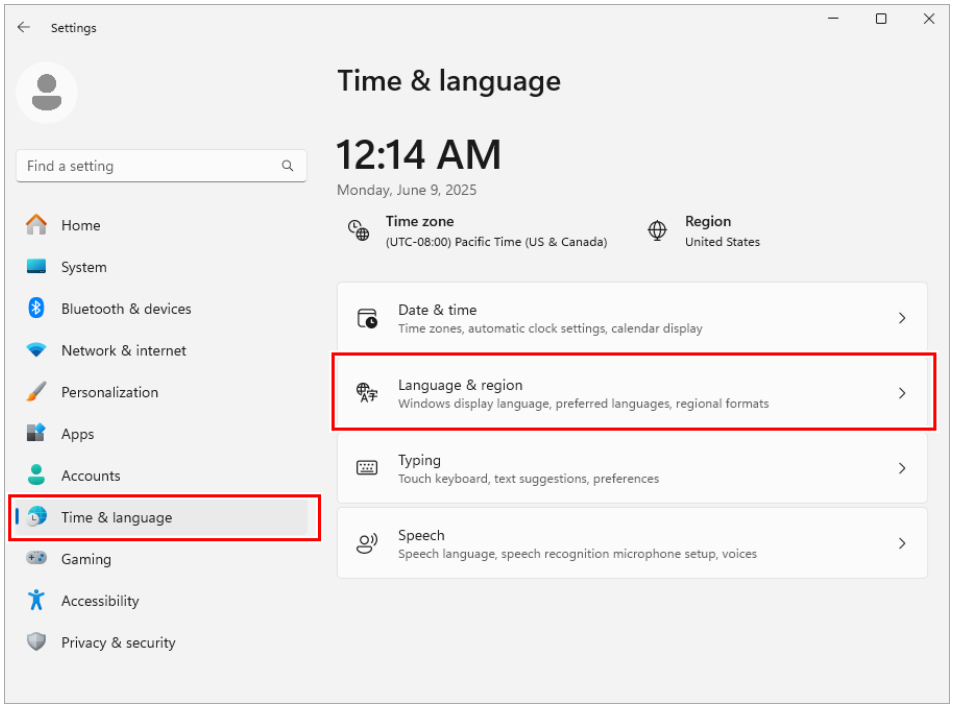

4 Click the [V] to the right of [Regional format], then select [Change formats].

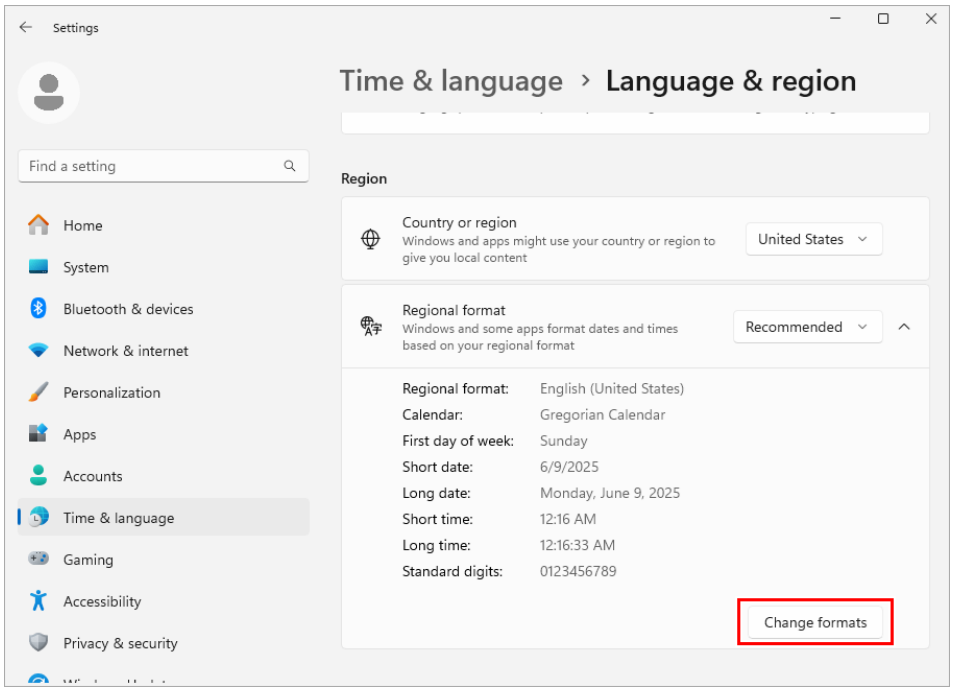

5 If a format including the day of the week is selected for [Short date], select a format that does not include the day of the week.

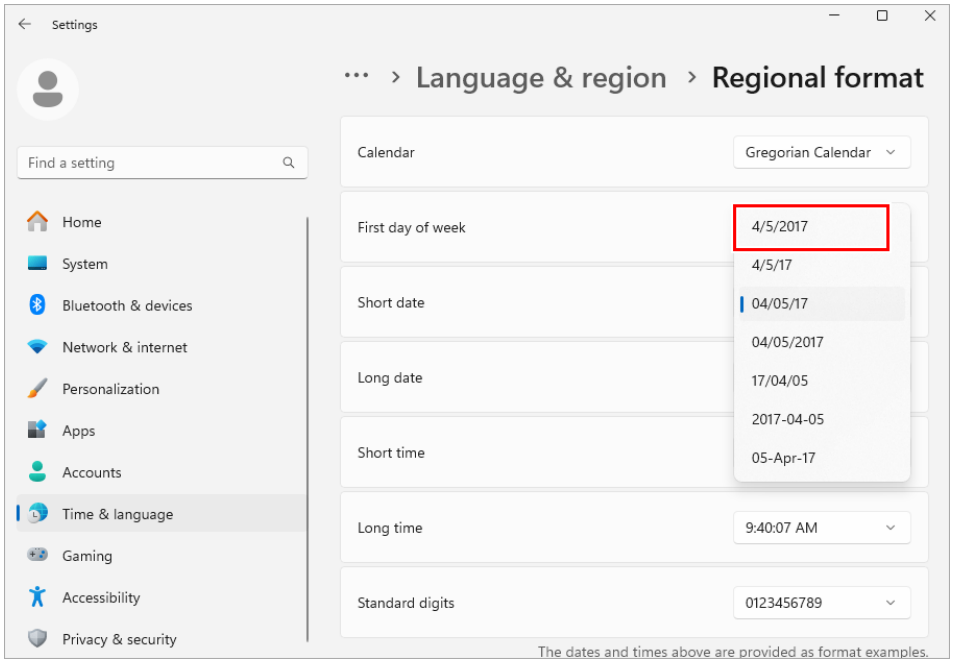

6 Close the [Settings] screen.

7 Launch RasterLink8, then register a printer or create a hot folder.

5.3 If a printer cannot be found when registering a printer

- Check to confirm that the IP address for the PC on which RasterLink8 is installed is not the same as the IP address of the printer.
- Check to confirm that there are no errors in the DHCP or fixed IP address.

RasterLink8 Installation Guide Manual Setup Edition

November, 2026

MIMAKI ENGINEERING CO.,LTD.
2182-3 Shigeno-otsu, Tomi-shi, Nagano 389-0512 JAPAN

D204013-11-16112026



© MIMAKI ENGINEERING CO., LTD.2026

KW

SW : 1.0.1