

# 毎日のお手入れ

お手入れの際は必ず**付属のゴーグル**と**手袋**を装着してください。


プリンターをより良い状態でご利用いただくために、**1日の作業終了後に**以下のお手入れを必ず行ってください。詳しくは「取扱説明書 第5章 お手入れ」「お手入れのお願い」をご覧ください。

メンテナンスに必要な道具	・メンテナンス用洗浄液キット (品番: SPC-0569)
	・ゴーグル (プリンタに付属)
	・手袋 (メンテナンス洗浄液キットに付属)
	・乾いた布 (毛羽立ちのないきれいなコットン)
	・綿棒 (メンテナンス洗浄液キットに付属)
	・ヘッド周辺用クリーンスティック (メンテナンス用洗浄液キットに付属)

## 1. ヘッドメンテナンスの実行

「ヘッドメンテナンス」を実行し、キャリッジやステーション周辺の清掃を行ってください。


- (1) ローカルで、[FUNC1](MENU) キーを押す
- (2) 「メンテナンス」を選択して [ENTER] キーを押す
- (3) 「ヘッドメンテナンス」を選択して [ENTER] キーを押す
- (4) 「キャリッジアウト」を選択して [ENTER] キーを押す
- (5) メンテナンスカバーを開ける

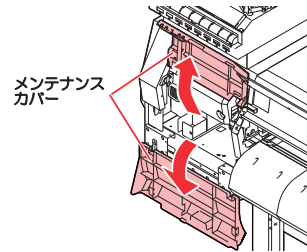

## 2. ヘッド周辺の清掃

クリーンスティックにメンテナンス洗浄液を含ませ、ヘッド周り、キャリッジの底面に付着したインクを拭き取ります。

ヘッドの側面をクリーンスティックで清掃します。

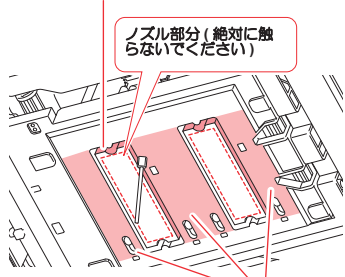

\*図は UCJV300


キャリッジ底面をクリーンスティックで清掃します



**重要!** 清掃中にノズル部分を絶対に触らないでください。

## 3. キャップの清掃

クリーンスティックにメンテナンス洗浄液を含ませ、キャップゴムに付着したインクを拭き取ります。

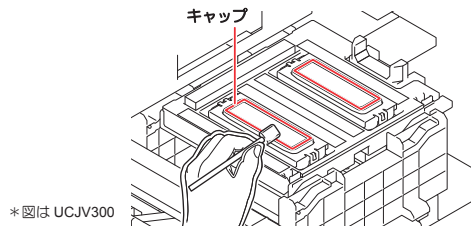


\*図は UCJV300



**重要!** キャップに乾燥したインクやゴミが付着すると、ノズル面を密閉することができなくなります。その結果、ノズル面が乾燥したり、クリーニング機能を実行してもノズル抜けが解消されないことがあります。

## 4. ワイパーの清掃


クリーンスティックにメンテナンス洗浄液を含ませ、ワイパーとブラケットに付着したインクを拭き取ります。

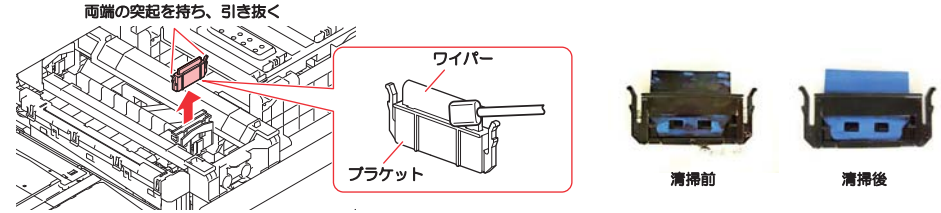

**重要!** ワイパーに乾燥したインクが付着した状態で使用を続けると、ノズル内に乾燥したインクが入り込みノズル詰まりの原因になります。


## 5. ワイパークリーナーの清掃

- (1) ワイパークリーナーに付着したインクを、メンテナンス洗浄液を含ませたクリーンスティックで拭き取ります。
- (2) 吸収材ケースの中にインクがたまっていたら、吸水ペーパーなどで吸い取ってください。

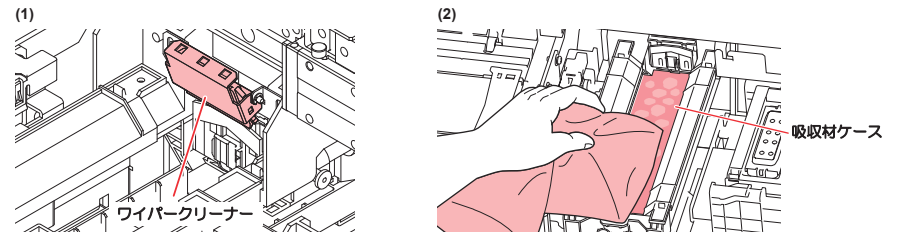


**注意**

- ・ワイパークリーナーはブラケットから取り外さないでください。
- ・ワイパークリーナーのワイパーは、表面のみ清掃します。(裏面は清掃の必要はありません)
- ・吸収材ケースの中の吸収材は取り外さないでください。
- ・ワイパークリーナー清掃後は、クリーナーが上を向いていないことを確認してください。

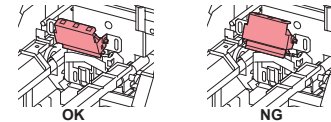

## 6. メディア押さえの清掃

乾いた布や綿棒でメディア押さえに付着したカットくずやホコリ等を拭き取ります。

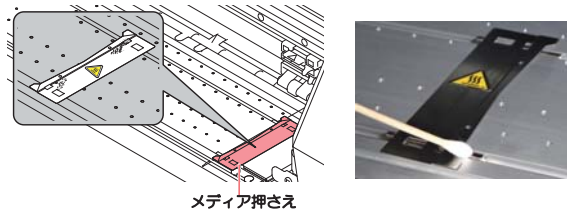

## 7. メンテナンスの終了

各清掃終了後、メンテナンスカバーを閉じて [ENTER] キーを押します。

# Daily Care

**Make sure to wear the attached goggles and gloves when you work.**


With a view to using this machine in a better condition, please be sure to follow the daily care at the end of the daily work. For details, please refer to the "Operation Manual Chapter 5 Maintenance" and "Request for Care and Maintenance".

<b>Tools required for maintenance</b>	• Maintenance washing liquid kit (SPC-0569)
	• Goggles (in the printer as an accessory)
	• Gloves (in the kit of cleaning solution for maintenance)
	• Dry cloth (Clean cotton with no fluff)
	• Swab (in the kit of cleaning solution for maintenance)
	• Clean stick for head periphery (in the kit of cleaning solution for maintenance)

## 1. Performing head maintenance

Perform [HEAD MAINTENANCE] to clean up the carriage and station surrounding area.


- (1) Press the [FUNC1](MENU) key in local.
- (2) Select [MAINTENANCE] and press the [ENTER] key.
- (3) Select [HEAD MAINTENANCE] and press the [ENTER] key.
- (4) Select [CARRIAGE OUT] and press the [ENTER] key.
- (5) Open the maintenance cover.

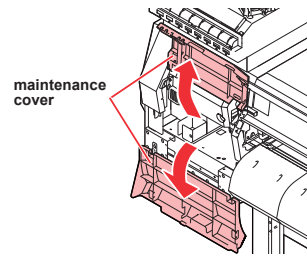

## 2. Cleaning head surrounding area

Remove ink on the head surrounding area and the carriage bottom with a cleaning stick dampened with cleaning liquid.

Clean the side of the head with a cleaning stick.

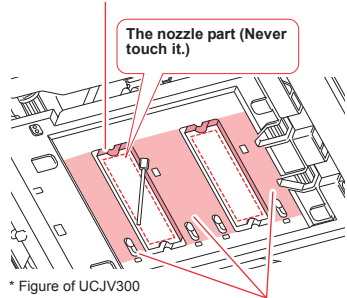


Clean the carriage bottom with a cleaning stick.

**Important!** • DO NOT touch the nozzles during the cleaning.

## 3. Cleaning the cap

Remove ink on the rubber on the cap with a cleaning stick dampened with cleaning liquid.

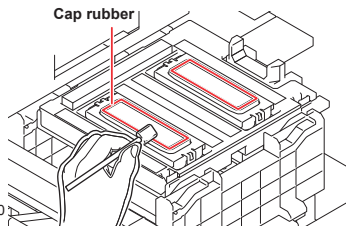


\* Figure of UCJV300

**Important!** • If dried ink or contaminants adhered to the cap, the nozzle surface cannot be closed firmly. As a result, the nozzle surface is dried and the nozzle clogging may not be eliminated even after the cleaning.

## 4. Cleaning the wiper

Remove ink on the wiper and bracket with a cleaning stick dampened with cleaning liquid.


Pinch the nubs on both edges and slide out the wiper.

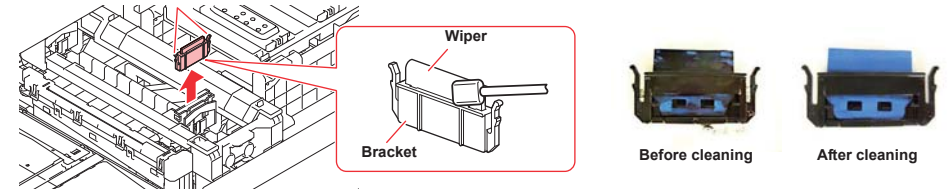


**Important!** • If you keep using filthy wiper with dried ink on it, dried ink particles may enter into the nozzles and causing nozzle clogging.

## 5. Cleaning the wiper cleaner

- (1) Wipe off the ink sticking to the wiper cleaner with a clean stick dampened in cleaning solution for maintenance.
- (2) If ink is accumulated in the ink pad case, use water-absorbing paper etc. to absorb it.

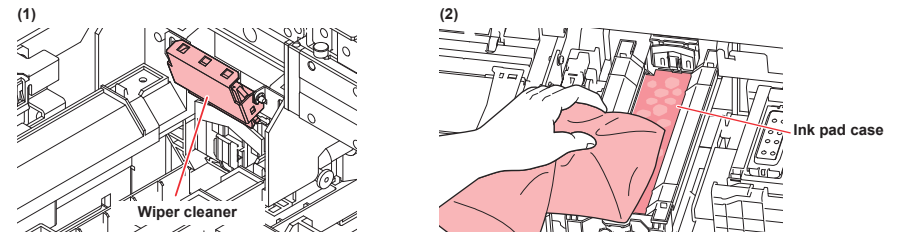


- Do not remove the wiper cleaner from the bracket.
- Clean only the surface of the wiper on the wiper cleaner. (It is not necessary to clean the rear side.)
- Do not remove the ink pad from the ink pad case.
- After cleaning the wiper cleaner, make sure that the cleaner is not facing up.

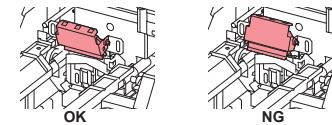

## 6. Cleaning media press

Wipe off debris from cutting or dust on the media press with a dry cloth or a cotton swab.

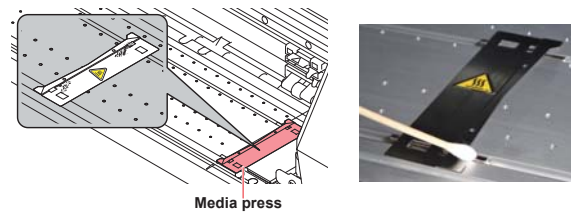

## 7. Finishing maintenance

Once all the cleaning is finished, close the head maintenance cover and the maintenance cover, and then press the [ENTER] key.